

LEBENSSTIL

KOLLEKTION

D'BOILER **LKAB-603SS**

INSTRUCTION MANUAL




Before operating this appliance, please read these instructions completely.

CONTENTS

Title	Page No.
Parts Identification	1
Technical Specifications	1
Important Safety Precautions	2
Precautions when using Jug Kettle	3
How to Operate Your Jug Kettle	3-4
Cleaning and Maintenance	4

Thank you for choosing LEBENSSTIL KOLLEKTION Jug Kettle.

Part Identification

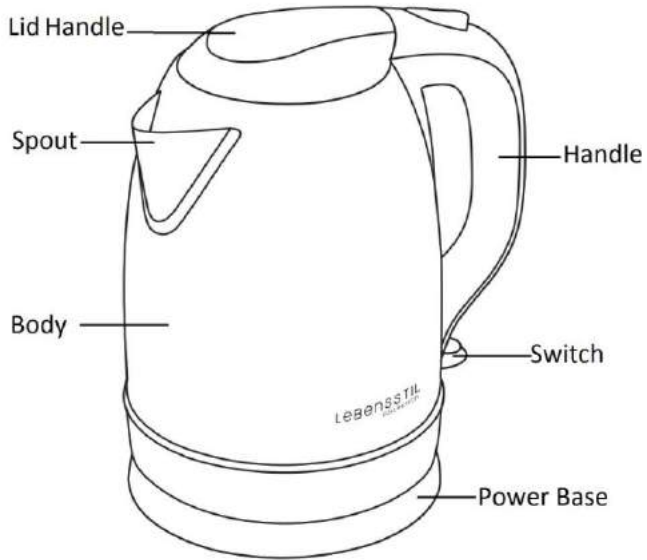

Technical Specifications

Voltage	220 - 240V~
Wattage	1850W - 2200W
Frequency	50/60Hz
Capacity	1.7L

Important Safety Precautions

- 1) Always switch off and unplug the appliance from the main electrical supply **BEFORE** cleaning and also when the appliance is not in use.
- 2) **NEVER IMMERSE THE APPLIANCE, POWER CORD OR PLUG INTO WATER OR OTHER LIQUIDS.** See section on “Care and Cleaning”.
- 3) Close supervision is needed when operating appliance near children. Ensure the electrical cord does not hang over the work surface.
- 4) This product must not be left unattended while it is connected to the main supply.
- 5) Always connect the power cord to the appliance **BEFORE** you plug in to the main electrical supply. To disconnect the appliance, switch off the main electrical supply before removing the plug from the appliance.
- 6) Do not operate the appliance with a damaged cord set, or plug. Any repairs should always be carried out by the Customer Service Centre or by an authorized service centre.
- 7) Do not place the appliance on or near a hot gas or electric burner, in a heated oven, or near easily flammable material.
- 8) Do not use outdoors or while standing in a damp area.
- 9) Do not use appliance for anything other than its intended use.
- 10) Always place appliance on a flat sturdy surface. When moving appliance, always take precaution not to touch the hot surface. Extreme caution must be used when moving an appliance containing hot liquids.
- 11) Use of accessories or equipments not supplied by the manufacturer may cause damage or malfunctioning of your appliance or result in injuries.

Precautions when using Jug Kettle

- 1) Use only cold water when filling.
- 2) Should you accidentally allow the kettle to operate without water; the boil-dry protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with cold water and re-boiling.
- 3) The base and exterior of the kettle must not become wet.

How to Operate Your Jug Kettle

Before using for the first time

Boil and discard the water at least twice without adding any chemicals or other additives.

How To Boil Water

1. Fill the kettle with water as required. You may refer to the water level indicator as reference. Do not fill water exceeding the "MAX" mark.
2. Position the kettle on the base unit and connect to the Mains electricity supply.
3. Press the ON lever down to start operating. The indicator light will be illuminated.
4. You may interrupt the boiling process at any time by switching off the main electricity supply or lifting the ON/OFF switch upwards.
5. The kettle switches off automatically when the water has been boiled. The indicator light will also turn OFF automatically.

6. Disconnect the kettle from Mains electricity supply.
7. Do not open the lid whilst pouring as the hot stem or hot water may splash on your hand.
8. If necessary, it will take you 5 minutes to wait for before you press the switch again to re-boil the water.

Cleaning and Maintenance

Before commencing to clean your Jug Kettle, ensure that the Mains power supply is switched OFF and the power cord is removed from the appliance. Wait until the appliance is at room temperature before commencing to clean it.

1. Never immerse the appliance into water, or allow moisture to contact with it.
2. When it is necessary, the exterior surfaces may be cleaned with a soft damp cloth. Never use any chemical or abrasive solution to clean your kettle.
3. To clean the interior of your kettle, use a food-grade descaling compound manufactured for this purpose, such as citric acid.

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

LEBENSSTIL
KOLLEKTION

Distributed by:

Kollektion Distribution Sdn. Bhd. (596854-A)

Lot 11B, Jalan 223, Section 51A,

46100 Petaling Jaya,

Selangor Darul Ehsan, Malaysia.

Tel: +603-7954 5200 Fax: +603-7954 5705

www.kollektion.com.my

Careline
1-800-881-770