

LEBENSSTIL
KOLLEKTION

PYRAMID KETTLE

LKAB-604SS / LKAB-604RD

LKAB-604BL / LKAB-604GN

INSTRUCTION MANUAL




Before operating this appliance, please read these instructions carefully.

CONTENTS

Title	Page No.
Parts Identification	2
Technical Specifications	2
Important Safety Precautions	3,4
Features	4
How to Operate Your Pyramid Kettle	5
Cleaning and Maintenance	6

Thank you for choosing LEBENSSTIL KOLLEKTION PYRAMID KETTLE

Parts Identification

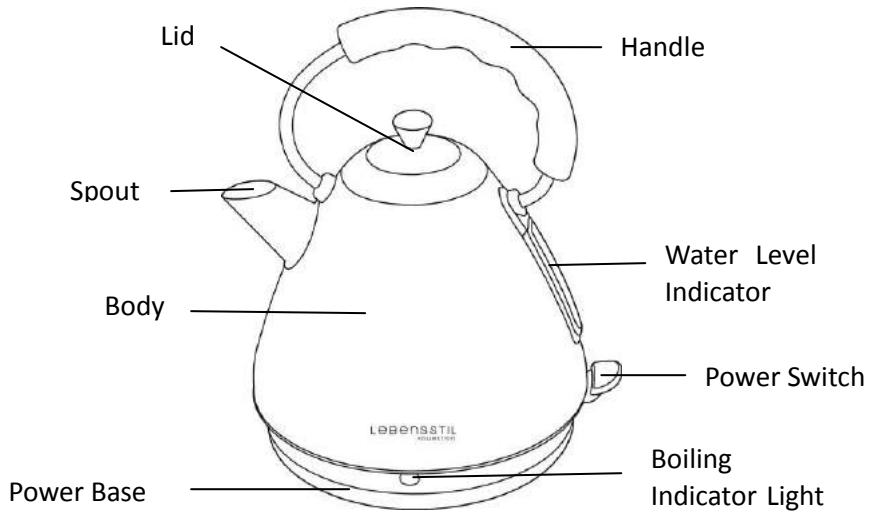

Technical Specifications

Model	LKAB-604SS	LKAB-604RD
	LKAB-604BL	LKAB-604GN
Voltage	220-240V~	
Wattage	1850-2200W	
Frequency	50/60Hz	
Capacity	1.7-Litre	

Important Safety Precautions

- Always switch off and unplug the appliance from the main electrical supply before cleaning it or when not in use.
- Do not immerse the appliance or electrical parts into water or any other liquids.
- Always place appliance on a flat sturdy surface. When moving appliance, always take precaution not to touch the hot surface. Extreme caution must be used when moving an appliance containing hot liquids.
- Close supervision is needed when operating appliance near children. Ensure the electrical cord does not hang over the work surface.
- Always attach the power base to the appliance BEFORE you plug in to the main electrical supply. To disconnect the appliance, switch off the power first before removing the power base from the main electrical supply outlet.
- Do not operate the appliance with a damaged cord set or plug. Any repairs should always be carried out by the Customer Service Centre or by an authorized service centre.
- Do not place the appliance on or near hot gas or electric burner, in a heated oven, or near easily flammable material.
- Do not use appliance for anything other than its intended use.
- Use of accessories or equipments not supplied by the manufacturer may cause damage or malfunctioning of your appliance or result in injuries.
- This appliance should not be used by the physically and mentally challenged or those with slow response (including children) unless sufficient supervision is provided during operation.

- This appliance is suitable for normal household use only and not for commercial use.
- Ensure that the voltage range shown on the appliance rating label corresponds to the main power supply's voltage.

Features

- Boil-dry protection – Should you have accidentally allowed the kettle to operate without water, boil-dry protection will automatically switch it off. If this should occur, allow 15 minutes to cool down before filling with cold water and re-boiling.
- 360°C rotational stainless steel coating and anti-slip feature design for safety and convenient use.
- Cord storage – Power cord can be stored at the bottom of the power base.

.How to Operate Your Pyramid Kettle

Before using for the first time

- Remove any adhesive stickers and foreign objects before use.
- Boil and discard the water at least twice without adding any chemicals or other additives. This will remove any dust or residues remaining from the manufacturing process.

How to boil water


1. Lift up the jug kettle from the power base before filling with water.
2. Fill the jug kettle with water as required. Do not exceed the “MAX” mark or below the “MIN” mark.

NOTE: Do not fill the water over the maximum level, as water may spill out of the spout when boiling.

3. Place the jug kettle onto the power base and connect to the power socket.
4. Press down the power switch to start operating. The boiling indicator light will be illuminated.
5. You may interrupt the boiling process at any time by lifting up the switch to turn off the power.
6. The jug kettle will switch off automatically when the water is boiled. The boiling indicator light will be turned off.
7. Disconnect the jug kettle from the power socket.
8. Do not open the lid whilst pouring as hot steam or hot water may leak out and cause injury to the user.
9. If necessary, you may have to wait 15 to 20 seconds before you can press the switch again to re-boil water.

Cleaning and Maintenance

- Always disconnect the appliance from the power supply and remove the power base from the kettle before cleaning.
- Always allow your appliance to cool completely before cleaning.
- Never immerse the appliance completely in water or any other liquids.
- If necessary, the exterior surfaces may be cleaned with a soft damp cloth. Never use any chemical or abrasive solution to clean the jug kettle.
- To clean the interior of the kettle, use a food-grade descaling compound manufactured for this purpose, such as citric acid.

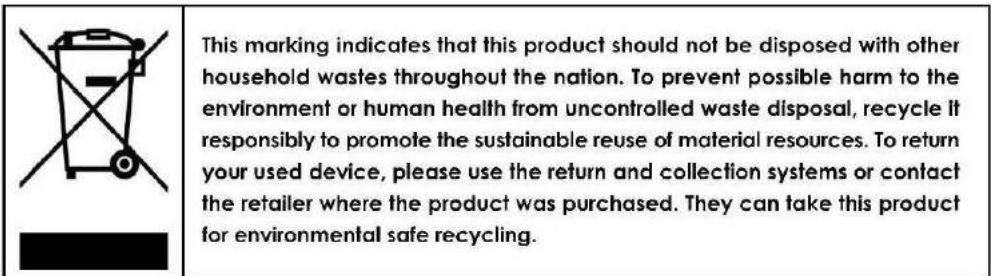

LEBENSSTIL
KOLLEKTION

Distributed by:

Kollektion Distribution Sdn. Bhd. (596854-A)

Lot 11B, Jalan 223, Section 51A,

46100 Petaling Jaya,

Selangor Darul Ehsan, Malaysia.

Tel: +603-7954 5200 Fax: +603-7954 5705

www.kollektion.com.my

Careline
1-800-881-770