


LEBENSSTIL  
KOLLEKTION

# CHOPPER LKCB-4112SS

## INSTRUCTION MANUAL

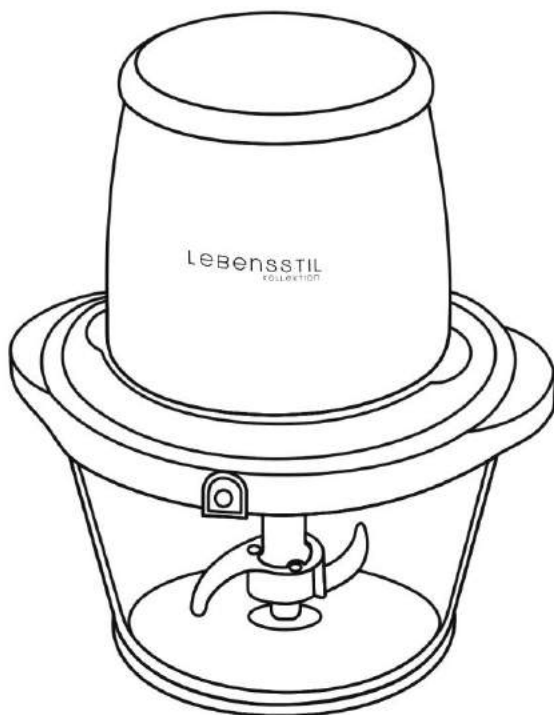

Before operating this appliance, please read these instructions carefully.

# CONTENTS

<b>Title</b>	<b>Page No.</b>
Important Safety Precautions	2
Parts Identification	3
Technical Specification	3
Operating Instruction	4
Cleaning And Maintenance	5


**Thank you for choosing LEBENSSTIL KOLLEKTION Chopper.**

## **Important Safety Precautions**

- 1) Always switch off and unplug the appliance from the main electrical supply **BEFORE** cleaning and also when the appliance is not in use.
- 2) **NEVER IMMERSE THE APPLIANCE, POWER CORD OR PLUG INTO WATER OR OTHER LIQUIDS.** See section on “Cleaning and Maintenance”.
- 3) Close supervision is needed when operating appliance near children. Ensure the electrical cord does not hang over the work surface.
- 4) This product must not be left unattended while it is connected to the main electrical supply.
- 5) Always connect the power cord to the appliance **BEFORE** you plug in to the main electrical supply. To disconnect the appliance, switch off the main electrical supply before removing the power cord from the appliance.
- 6) Do not operate the appliance with a damaged cord set or plug. Any repairs should always be carried out by the Customer Service Centre or by an authorized service centre.
- 7) Do not place the appliance on or near a hot gas or electric burner, in a heated oven, or near easily flammable material.
- 8) Do not use outdoors or while standing in a damp area.
- 9) Do not use appliance for anything other than its intended use.
- 10) Always place appliance on a flat and sturdy surface. When moving the appliance, always take precaution not to touch the hot surface. Extreme caution must be used when moving an appliance containing hot liquids.

## Parts Identification

- A Control switch
- B Motor unit
- C Plug and power cord
- D Lid
- E Blade
- F Bowl
- G Glass cover

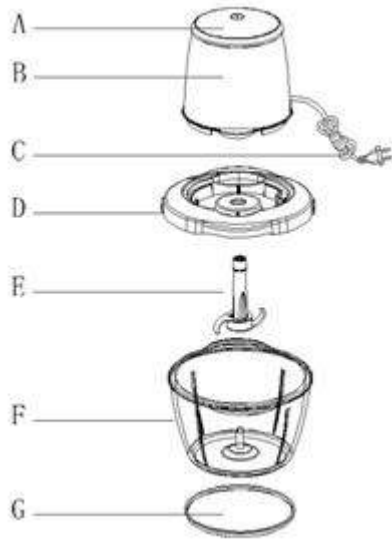

## Technical Specifications

Model	LKCB-4112SS
Voltage	220 - 240V~
Wattage	300W
Frequency	50/60Hz
Capacity	1.2-Litre

# Operating Instruction

## Chopping

1. Place the blade **(E)** onto the axis of the bowl **(F)** and place the ingredients to be chopped in the bowl.
2. Fit the lid **(D)** on to the bowl **(F)** by pressing it until it locks into place.
3. Place the motor unit **(B)** on to the bowl/lid set by turning gently to push the blade axis into the motor unit axis.
4. Plug in the appliance to a power outlet.
5. Press the control switch **(A)** and keep it pressed to begin operating the appliance.
6. Release the button **(A)** and wait for the blade to stop.
7. Remove the motor unit **(B)** by pressing the lid **(D)** and unlocking the lid **(D)** by pushing in the opposite direction. Remove the blade **(C)** carefully.

## Blending

1. Place the blade in the bowl as shown for chopping.
2. Pour the liquid to be blended into the bowl.
3. To blend meat, cut meat into small pieces of 20-25mm before placing in the bowl.
4. Remove all bones and tendons before blending meat.

Note: Use the below chart as reference only.

<b>Ingredients</b>	<b>Maximum Quantity</b>	<b>Maximum Time</b>
Parsley	130g	15secs
Onion/ Shallots	200g	15secs
Garlic	150g	15secs
Bread crumbs	20g	15secs
Almonds/ Hazelnut	20g	15secs
Cheese	200g	15secs
Boiled egg/Potatoes	200g	15secs
Ham	200g	15secs
Meat	300-350g	15secs
Dried apricots	120g	10secs

## **Cleaning And Maintenance**

- Always unplug the appliance before cleaning.
- The motor unit **(B)** must only be wiped with a damp cloth. Never place it in a dishwasher, immerse in water or place it under running water.
- The bowl **(F)**, the blade **(E)** and the lid **(D)** can be washed under running water or in the dishwasher.
- Gently wipe the appliance and parts with a dry cloth. Do not use abrasive creams, steel wool or scouring pads. Store it in a dry place.
- **WARNING:** BLADES ARE SHARP. EXERCISE CAUTION WHEN CLEANING.



This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

LEBENSSTIL  
KOLLEKTION

Distributed by:

**Kollektion Distribution Sdn. Bhd.** (596854-A)

Lot 11B, Jalan 223, Section 51A,

46100 Petaling Jaya,

Selangor Darul Ehsan, Malaysia.

Tel: +603-7954 5200 Fax: +603-7954 5705

[www.kollektion.com.my](http://www.kollektion.com.my)

Careline  
1-800-881-770