

LEBENSSTIL
KOLLEKTION

DRIP COFFEE MAKER LKCM-101SS

INSTRUCTION MANUAL



Before operating this appliance, please read these instructions completely.

CONTENTS


Title	Page No.
General Safety Precaution	1
Part Identification	2
Specifications	3
How to Use	3
- Before First Use	
- Make Coffee Immediately	
- Automatic Start Function	
- Hints For Great Tasty Coffee	6
Cleaning and Maintenance	7
- Cleaning	
- Descaling	

Thank you for choosing LEBENSSTIL KOLLEKTION Drip Coffee Maker.


General Safety Precaution

- Before connecting the appliance, please check whether the voltage indicated on the appliance corresponds with the main voltage in your home.
- Do not immerse appliance, cord or plug in water or other liquid.
- Do not overload outlets or extension cords. It can result in fire or electric shock.
- This product must not be left unattended while it is connect to the main supply.
- Use only original accessories supplied.
- Do not operate this appliance with a damaged cord or plug, or in abnormal state. If its main cord is damaged, it must be replaced by the manufacturer or send it to the nearest service agent or to the qualified person.
- This coffee maker is intended for indoor and household use only; not for outdoor, commercial and industrial use.
- Do not pull the cord to remove the plug from wall socket, pull on the plug instead.
- Do not attempt to insert or remove the plug with wet hands.
- Do not place the appliance on or near hot gas/electric burner, or a heated oven.
- Do not let cord hang over the edge of table or counter or touch any hot surfaces.
- In the event not using the appliance for a long period of time, please remove the plug from the power outlet.
- This appliance should not be used by the physically challenged, slow response or mentally disabled people (including children) unless guidance is provided during operation.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Repairs and services should always be carried out by authorized Customer Care/Service Centre.

Part Identification

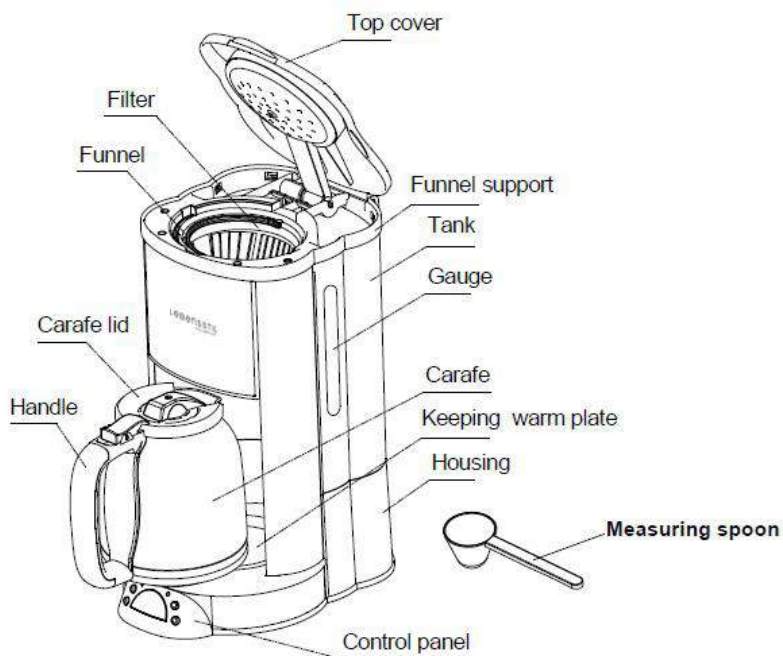

Control Panel

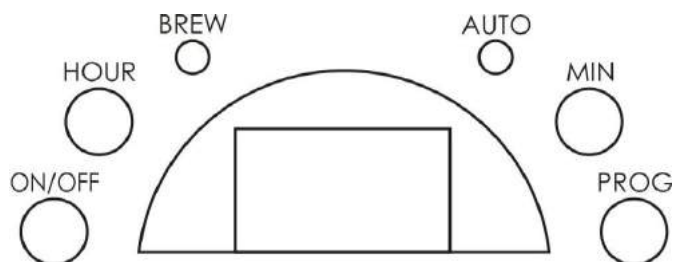

Specification

MODEL	LKCM-101SS
RATED VOLTAGE	220-240V~
RATED WATTAGE	823-980W
FREQUENCY	50/60Hz

How to Use

BEFORE FIRST USE

Check the accessories completely and then make sure the unit has no damaged. For a perfect taste, carry out descaling process for 2-3 times with fresh water (without adding coffee). Then pour out the water and clean the carafe, carafe lid, funnel and the filter thoroughly with warm water. Ensure to cool down the appliance for 5 mints for every descaling process or brewing coffee of full carafe.

MAKING COFFEE IMMEDIATELY

- 1) Open the top cover of the coffee maker, fill in with the proper amount of water into the tank by using the carafe. The water level should not exceed the MAX level which marked on the side of the appliance.
- 2) Place the funnel into the funnel support, ensure it is assembled correctly. Then place the filter into the funnel.

- 3) Add coffee ground into filter. Usually for a cup of coffee it is recommended to put 1 spoon full of coffee ground, but you may adjust according to you own desired taste.
- 4) Once the coffee ground has been added into the filter, make sure to close the top cover and insert the carafe on keeping warm plate horizontally.
- 5) Plug the power cord into the outlet, the LCD will display the default setting as “12:00”.
- 6) Press “ON/OFF” button once, then the red lamp of brew will be illuminated. The appliance will begin working.

Note: *You can take out carafe, pour and serve at any time of dripping. The appliance will stop dripping automatically when the carafe is removed. But the carafe need to be place back within 30 seconds to avoid over flow of the coffee thru the funnel.*

- 7) Do not open the top cover when the coffee maker is operating or while in dripping stage. The flow back of hot water will damage the appliance.
- 8) You can take out carafe, pour and serve when finish brewing completely
Note: *The coffee you get will be a bit lesser than the water you have inputted in, it is because the water is absorbed by coffee ground and also vaporise when the heating process take place.*
- 9) Always turn off the coffee maker and unplug the power cord from the electrical outlet when the coffee maker is not in use.
Note: *If you have made one carafe of coffee and wish to make some more straight away. Please switch off the coffee maker and allow at least 5 minutes for it to cool down. Then you can refill the water tank and make more coffee.*

AUTOMATIC START FUNCTION

If you do not want the coffee maker start operation immediately, for example now it is 8:10 am, you want the coffee maker automatically start at 1:00 pm, first follow the steps from 1 to 5 of above section, then you can set the automatic start function as follows:

- 1) Press “PROG” button, the “LCD” will display “CLOCK”. Set the current time by pressing the “HOUR” and “MIN” (See Fig.1).



Fig.1

Note: The time cycle is 24 hours. Select desired time by pressing the “HOUR” and “MIN” continuously.

- 2) Press “PROG” button again, the “LCD” will display “TIMER”, then set the automatic start time by pressing the “HOUR” and “MIN”. (See Fig.2)



Fig.2

- 3) Press “ON/OFF” twice, the green lamp of AUTO will be illuminated, at the same time the LCD will display the current clock, you may see the automatic starting time by pressing the “PROG” button.

Note: You may cancel the automatic start function by pressing ON/OFF button. If you want to change the automatic start time once again. You need follow the above 1-3 steps again.

At 1:00 pm, the green lamp of AUTO will be extinguished, and the red lamp of BREW will be illuminated. The appliance will start automatically. After brewing, you can leave the carafe on keeping warm plate. Once the coffee maker has completed the brewing. The coffee can be kept warm for 2 hours if it is unattended and also it will cut off the power automatically after 2 hours.

HINTS FOR GREAT TASTY COFFEE

- 1) A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the “**Cleaning and Maintenance**” section. Always use fresh, cold water in the coffee maker.
- 2) Store unused coffee grounds in a cool, dry place. After opening a package of coffee grounds, reseal it tightly and store it in a refrigerator to maintain the freshness of it.
- 3) For an optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
- 4) Do not reuse coffee grounds since this will greatly reduce the coffee' flavour. Reheating coffee is not recommended as coffee is at its peak flavour immediately after brewing.
- 5) Oiliness may occur more frequently if heavily roasted coffees are used.

Cleaning and Maintenance

CLEANING

- Always remove the main plug from the wall socket before cleaning the appliance.
- Never immerse the appliance in water.
- Appliance should only be cleaned with a damp cloth.
- The carafe and the filter and the funnel can be washed in hot soapy water.

DESCALING

- Descale your coffee maker regularly.
- Pour 1/3 of ordinary vinegar and then 2/3 of water into the carafe. After mixed it, fill in into the water tank and make sure to remove the funnel with ground coffee. Operate the appliance as normal procedure without the funnel and the filter.
- After the descaling with the vinegar is over. Repeat the process with the normal water until there is no yellow liquid and vinegar odor is left.

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

LEBENSSTIL
KOLLEKTION

Distributed by:

Kollektion Distribution Sdn. Bhd. (596854-A)

Lot 11B, Jalan 223, Section 51A,

46100 Petaling Jaya,

Selangor Darul Ehsan, Malaysia.

Tel: +603-7954 5200 Fax: +603-7954 5705

www.kollektion.com.my

Careline
1-800-881-770