


LEBENSSTIL
KOLLEKTION

CLASSIC TOWER FAN LKTF-804SS

INSTRUCTION MANUAL

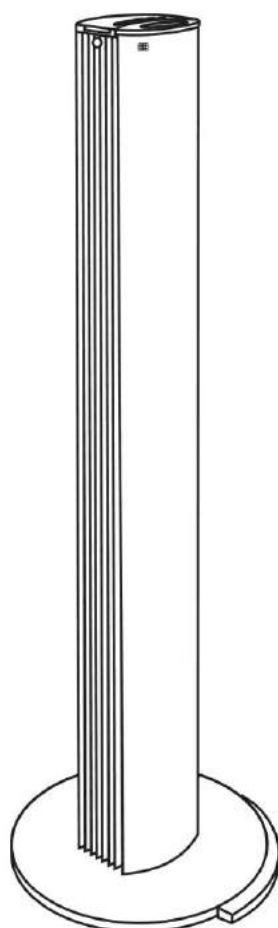


Before operating this appliance, please read these instructions completely.

CONTENTS

| Title | Page No. |
|---------------------------|----------|
| Parts Introduction | 1 |
| Technical Specifications | 1 |
| Before Using | 1 |
| How to Assembly Tower Fan | 2 |
| How to Use Tower Fan | 2 |
| Cleaning and Maintenance | 3 |
| Important Guidelines | 3 |

Thank you for choosing **LEBENSSTIL KOLLEKTION** Classic Tower Fan.

Parts Introduction

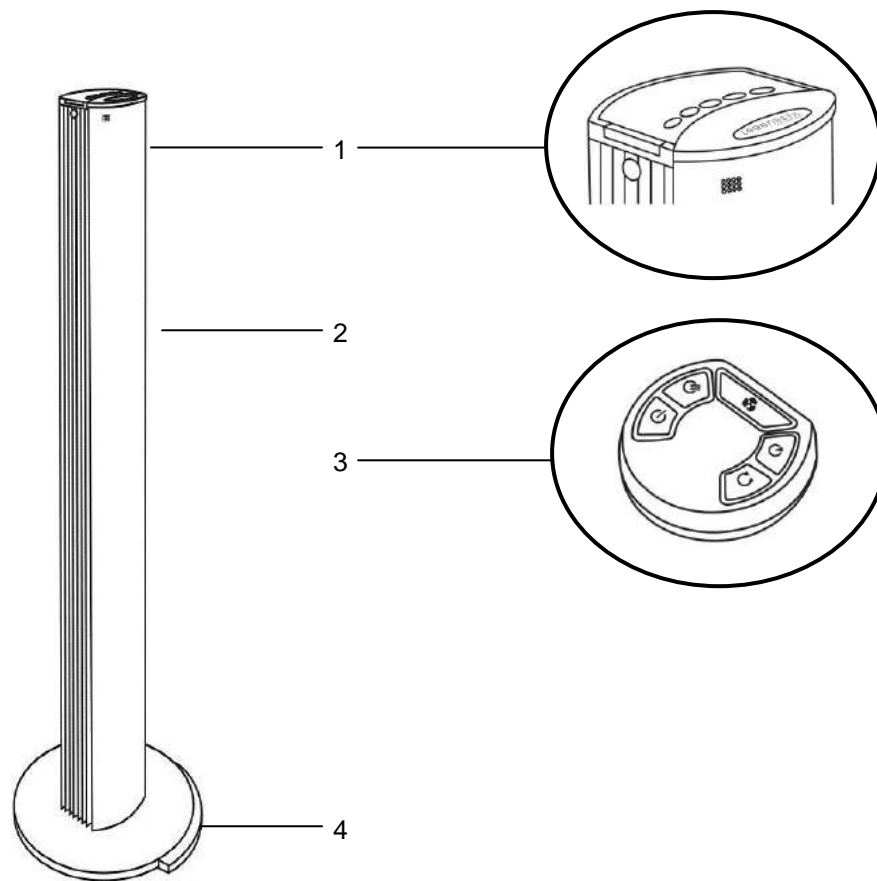

1. Control Panel
2. Main Body
3. Remote Control
4. Base

Technical Specifications


| | |
|-----------|-------------|
| Voltage | 220 - 240V~ |
| Wattage | 40W |
| Frequency | 50Hz |

Before Using

- Please read these instructions carefully before using and keep them for future reference.
- Check your local main voltage whether it is the same as stated on the rating label.
- Before using for the first time, remove any protective films or stickers from the table fan.
- Ensure the power switch is at the "0" position.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn OFF any control, then remove plug from wall outlet.

How to Assembly Tower Fan

- Unpack the fan from gift box.
- Lay the body horizontally on the ground.
- Attach the base to the main body and ensure lead the power cord to insert through the base as diagram shown.
- Use the screws (provided) to secure base to the main body.
- Ensure the main body is completely interlocked with the base unit.

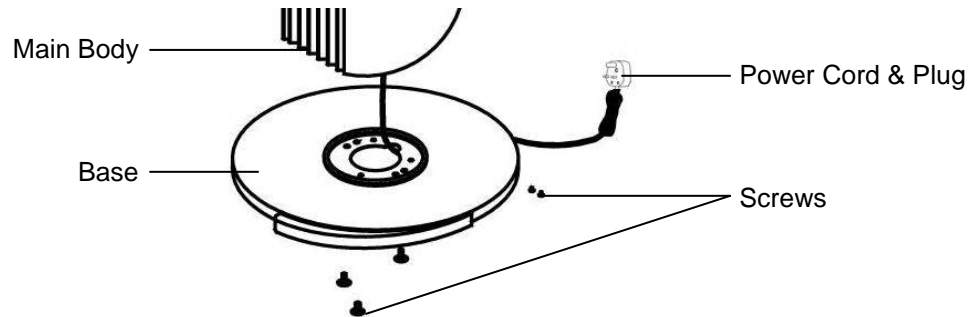

How to Use Tower Fan

- The fan can be operated by buttons at the control panel or by using the remote control provided.



(ON: GREEN Indicator; OFF: NO Indicator)

- Turn on the fan by pressing ON/OFF button. The fan will commence at normal mode with low speed function.



(LOW: RED Indicator; MEDIUM: ORANGE Indicator; HIGH: GREEN Indicator)

- When the SPEED button is pressed again and again, the fan speed will be adjusted in sequence from Low – Medium – High speeds. Press the SPEED button for the third time, the fan will resume at low speed again.



(ON: GREEN Indicator; OFF: NO Indicator)

- Press MODE button once to select any of the following wind mode:
 - NORMAL mode: Unit operated in selected fan speed as at LOW, MEDIUM or HIGH.
 - NATURAL mode: Unit operates according to computerized intervals of changing speeds.



(180°C: GREEN Indicator; 120°C: ORANGE Indicator; 60°C: RED Indicator)

- Press the OSC button once to activate the oscillation function and the fan will be oscillate in 180 degree. The fan oscillation can be adjusted in sequence from 180 degree – 120 degree – 60 degree, respectively. Press the button in forth time to cancel the oscillation function.



(2 Hrs: RED Indicator; 4 Hrs: ORANGE Indicator; 8 Hrs: GREEN Indicator)

- Press the TIMER button to set the desired time for the fan to operate. When this set time is reached, the fan will be switched off automatically. Time can be set from 2 hours, 4 hours and 8 hours for each operation.
- Fan can be stopped any time during any of the above operation by pressing the ON/OFF button once.

Cleaning and Maintenance

- Always unplug the product from the wall socket and shut down completely prior to cleaning.
- Do not use abrasive sponge, scouring pads or stiff brush to clean the appliance.
- Please be cautious when cleaning the product near to the heater housing area.
- Use only damp cloth to wipe the exterior surfaces of the unit. Do not immerse the main body in water.
- Do not allow the electrical components to be exposed to water.
- For proper storage, always place the unit in a low humidity environment.

Important Guidelines

- Use only original accessories supplied.
- The current voltage which indicates on the plate must correspond to your local voltage.
- The appliance should be used only on condition that the type of power supply corresponds to the marking label. Otherwise, it will not work or even be damaged.
- Never use the appliance inside the bath, under a shower or over a wash basin full of water.
- If the appliance falls into water, pull the power plug out from the power socket immediately.
- Never use the appliance unless it is fully assembled.
- Do not overload outlets or extension cords. It can result in fire or electric shock.
- Do not use the appliance if the power supply cord or plug has been damaged.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not immerse the cord, plug or appliance in water or other types of liquid and do not pour water onto it to avoid from fire, electrical shock or personal injury.
- To protect against risk of electrical shock, do not force any foreign objects such as pins and wires into any openings.
- Do not pull the cord to remove the plug from wall socket, pull on the plug instead.
- Do not attempt to insert or remove the plug with wet hands.
- Do not place the appliance on or near hot gas/electric burner, or a heated oven.
- Do not let cord hang over the edge of table or counter or touch any hot surfaces.
- In the event not using the appliance for a long period of time, please remove the plug from the power outlet.
- Never let children use electrical equipment without adult supervision.
- Educate children about the danger and safety rules associated with operating electrical equipment.
- This appliance should not be used by the physically challenged, slow response or mentally disabled people (including children) unless guidance is provided during operation.
- This appliance is intended for indoor and household use only; not for outdoor, commercial and industrial use.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Repairs and services should always be carried out by authorized Customer Care/Service Centre.



This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Lebensstil KOLLEKTION

Distributed by:
Kollektion Distribution Sdn. Bhd. (596854-A)
Lot 11B, Jalan 223, Section 51A,
46100 Petaling Jaya,
Selangor Darul Ehsan, Malaysia.
Tel: +603-7954 5200 Fax: +603-7954 5705

www.kollektion.com.my

Careline
1-800-881-770