 


LEBENSSTIL
KOLLEKTION

TABLE GRILL LKTG-3901RP

INSTRUCTION MANUAL

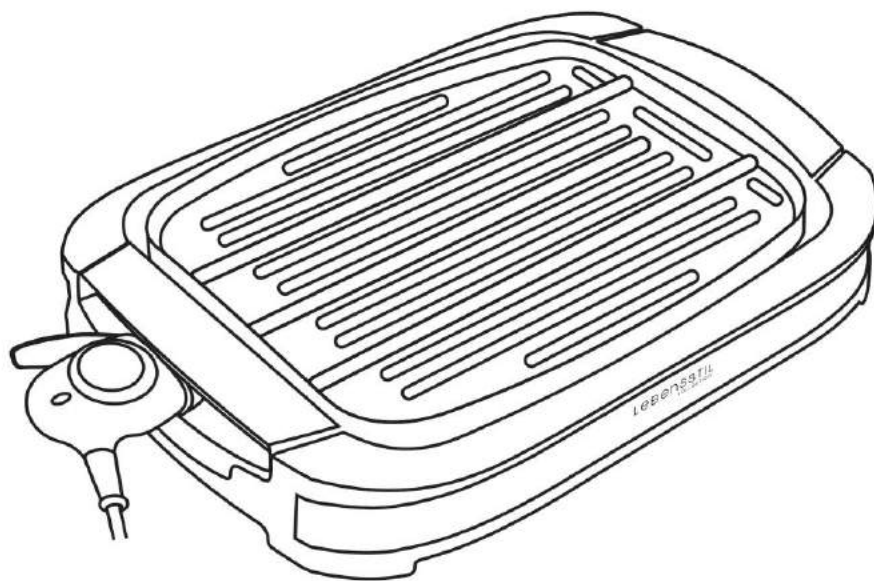


Before operating this appliance, please read these instructions completely.

CONTENTS

Title	Page No.
Parts Identification	1
Technical Specifications	1
Before Using	1
Temperature Control Probe	2
How To Operate Table Top Grill	2
Cleaning and Maintenance	2
Important Guidelines	3

Thank you for choosing LEBENSSTIL KOLLEKTION Table Grill.

 Part Identification

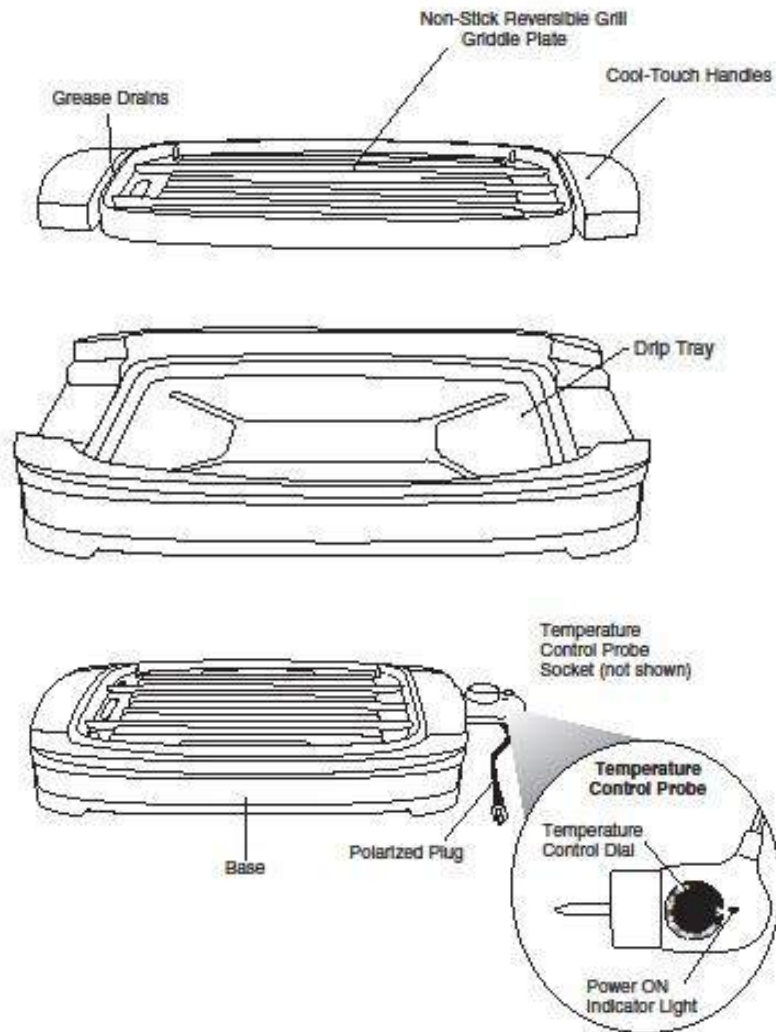

Technical Specifications

Voltage	220 - 240V~
Wattage	2200W
Frequency	50/60Hz

Before Using

- Please read these instructions carefully before use and keep them for future reference.
- Check your local main voltage whether it is the same as stated on the rating label.
- Before using for the first time, remove any protective film or sticker from the product.
- Ensure the power switch is at off position.

Temperature Control Probe

- The temperature control probe is the nerve center and brain of the Reversible Grill Griddle, so treat it carefully. Dropping or banging it could change its calibration and make the temperature settings inaccurate.
- Rotate the dial to select the temperature as called for in the recipe.
- The indicator light on the temperature control probe will illuminate as soon as the dial is rotated. The light will go out once the selected temperature has been reached.
- Allow the Reversible Grill Griddle to cool before removing the temperature control probe.
- To clean the temperature control probe, simply wipe down with a soft, damp cloth. Make sure you dry it thoroughly before using again.

NOTE: The temperature control probe is not submersible.

CAUTION: Use the temperature control probe supplied with this Reversible Grill Griddle only. The use of any other temperature control probe may cause fire, electric shock, or injury.

How To Operate Table Top Grill


- Before using for the first time, wash the oil dripping tray and cooking plate with lukewarm water. Dry thoroughly.
- Open the lid and place the oil dripping pan into the base.
- Place the cooking plate on the oil dripping tray.
- The table top grill can be used in 2 positions: Open or Close. To use as opened position, simply squeeze the lid clip and ensure it is secured into position. In the normal closed position, it will lock into the base accordingly
- Insert the temperature controller into the body, and then switch it on. (Note: The temperature controller cannot be inserted and operated without the oil dripping tray and cooking plate in position for safety reason).
- You may adjust the desired temperature while cooking.
- When the indicator light is switched on, it is warming up automatically. When the indicator light is switched off, it means your desired temperature has already been reached.
- Before frying, it is recommended to adjust the temperature to the maximum. You may start frying after 5 minutes when optimal temperature has been achieved.
- After cooking, ensure the Temperature Controller is at "OFF" position. Only then should you remove the plug from the power outlet.

Cleaning and Maintenance

- Always unplug the product from the wall socket and shut down completely prior to cleaning.
- Do not use abrasive sponge, scouring pads or stiff brush to clean the appliance.
- Please be cautious when cleaning the product near to the motor housing area.
- Use only damp cloth to wipe the exterior surfaces of the appliance. Do not immerse the main body in water.
- Do not allow the motor or other electrical components to be exposed to water.
- For proper storage, always place the appliance in a low humidity environment.

Important Guidelines

- Use only original accessories supplied.
- The current voltage which indicates on the plate must correspond to your local voltage.
- The table top grill should be operated only on condition that the type of power supply corresponds to the marking label. Otherwise, it will not work or even be damaged.
- Do not operate the appliance unless it is fully assembled.
- Do not scratch the grill surface. Use non-metallic implements only.
- Do not touch hot surfaces. Use oven mitts to remove grill plate by using handles while the appliance is hot. Always place appliance on a heat resistant surface.
- Extreme cautions should be taken when moving grill containing hot liquid or oil.
- Do not operate this appliance without the drip pan in place.
- Do not overload outlets or extension cords. It can result in fire or electric shock.
- Do not operate the appliance if the power supply cord or plug has been damaged.
- This table top grill is intended for indoor and household use only. It is not for outdoor, commercial and industrial use.
- Do not immerse the cord, plug or appliance in water or other types of liquid and do not pour water onto it to avoid from fire, electric shock or injuries.
- To protect against risk of electric shock, do not force any foreign objects such as pins and wires into any openings.
- Do not pull the cord to remove the plug from wall socket, pull on the plug instead.
- Do not attempt to insert or remove the plug with wet hands.
- Do not place the appliance on or near hot gas burner, electric burner or a heated oven.
- Do not let cord hang over the edge of table or counter or touching any hot surface.
- When the appliance is not in use for a long period of time, remove the plug from the power outlet.
- Do not allow the motor or other electrical components to be exposed to water.
- Do not allow children to use electrical equipment without adults' supervision.
- Educate children about the danger and safety rules associated with operating electrical equipment.
- This appliance should not be used by the physically challenged, slow response or mentally disabled people (including children) unless guidance is provided during operation.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.

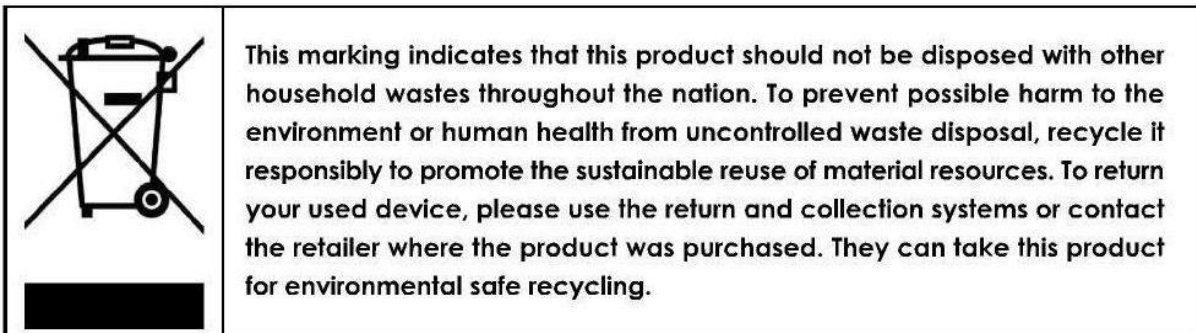

LEBENSSTIL

KOLLEKTION

Distributed by:

Kollektion Distribution Sdn. Bhd. (596854-A)

Lot 11B, Jalan 223, Section 51A,

46100 Petaling Jaya,

Selangor Darul Ehsan, Malaysia.

Tel: +603-7954 5200 Fax: +603-7954 5705

www.kollektion.com.my

Careline
1-800-881-770