

LEBENSSTIL  
KOLLEKTION

# POP UP TOASTER

## LKTO-203SS

### INSTRUCTION MANUAL




Before operating this appliance, please read these instructions completely.

## **CONTENTS**

<b>Title</b>	<b>Page No.</b>
Parts Identification	1
Technical Specifications	1
Important Safety Precautions	2-3
Precautions when using Toaster	3
How to Operate Your Toaster	3-4
Cleaning and Maintenance	5

**Thank you for choosing LEBENSSTIL KOLLEKTION Toaster.**

## Part Identification

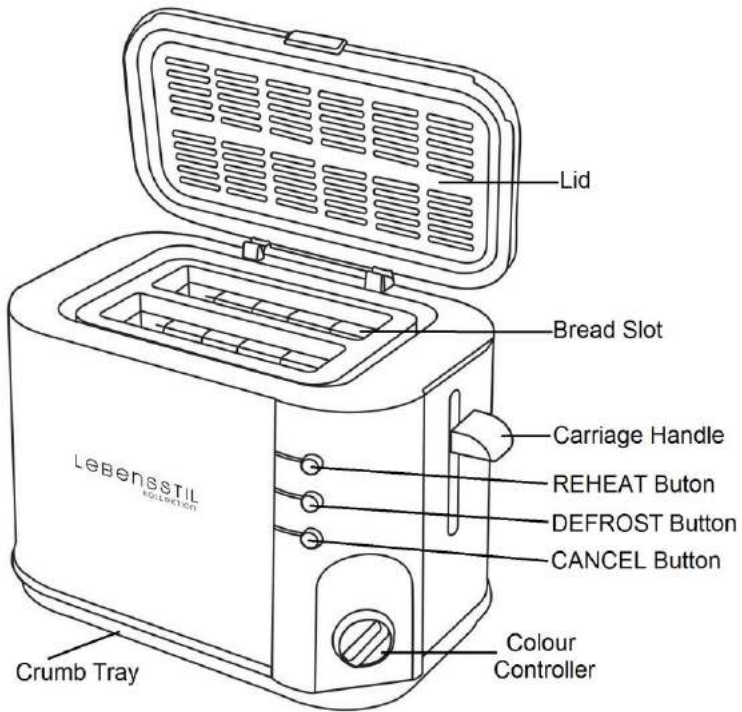

## Technical Specifications

Voltage	220 - 240V~
Wattage	750-850W
Frequency	50Hz

## **Important Safety Precautions**

**When using electrical appliance. Basic safety precautions should always be followed including the following:**

1. Read all instruction.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
3. Do not touch hot surface. Use handles or knobs only.
4. To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
6. Children should be supervised to ensure that they do not play with the appliance.
7. Unplug unit from outlet when not in use and before cleaning. Allow to cooling before putting on or taking off parts.
8. Allow the unit to cool completely before cleaning or storing.
9. Do not operate any appliance with a damaged cord or plug, or in abnormal state. If its main cord is damaged, it must be replaced by the manufacturer, the nearest service agent or a qualified person.
10. Do not let the cord hang over edge of table or counter, or touch hot surface.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.

12. Do not use the appliance for other than its intended use.
13. Oversize food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock.
14. Bread may burn, therefore toasters must not be used near or below curtains and other combustible materials, and they must be watched.
15. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
16. Use the appliance on a level and stable work surface.
17. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
18. Don't attempt to dislodge food when toaster is in operation.
19. Be sure to take the bread out carefully after toasting so as to avoid injuries.
20. Don't use the appliance outdoors.

## **How to Operate Your Toaster**

### **Before using for the first time**

As there is manufacturing residue or oil remained in the toaster or heating element, it usually will emit the odor for the first use. It is normal and will not occur after several times use, for the first use it is suggested to operate according to the below steps, except without bread. Then let the toaster cool down and begin toasting the first slice.

### **Operation**

1. Open the lid, put bread slice into the bread slot, it can be inserted two slices at most every time. Only the regular slice can be placed into the bread slot.

**Note:** 1) Make sure the lid is opened, the lid is equipped with an interlock switch, if the lid is not opened, the toaster will not operate.

2) Make sure the crumb tray is completely positioned in place before using.

2. Plug the power cord into the outlet.

3. Set the color control bar to your desired color. There is 7-position level, the lowest is set white and the highest is dark. The middle position can toast the bread to golden color.

**Note:** 1) Toasting color for one slice is darker than that for double bread at the same level.

2) If toasted continuously, toasting color for the latter bread is darker than that for the anterior bread at the same level.

4. Press carriage handle down vertically until it is positioned in place, and the indicator of **Cancel** will be illuminated. The appliance will begin at once. Once the bread has been toasted to the preset color, the carriage handle will be automatically pop up.

**Note:** Only the power supply is switching on, the carriage handle can rest on the bottom of slot.

5. During the toasted process, you may observe the toasting color. If it is satisfying, you press the **CANCEL** button to cancel the operation at any time.

6. If you want to reheat the cold toasted bread, press the **Reheat** button and the indicator of it will be illuminated. In this mode toasting time is fixed, so long as time is running over, the carriage handle will automatically spring up and end up the reheating process.

7. If the bread has been taken out from refrigerator. Set color controller to your desired color. Press carriage handle down vertically until it is positioned in place, then press **Defrost** button and the indicator of it will be illuminated, in this mode it will be toasted to your desired color.

## Cleaning and Maintenance

1. Disconnect the power supply before cleaning.
2. Wipe the outside with soft dry cloth after toaster cools down, never use metal polish.
3. Pull out crumb tray on bottom of toaster and empty it. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
4. When not use or storage, place the lid in place to prevent from the dust.

### Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

LEBENSSTIL  
KOLLEKTION

Distributed by:

**Kollektion Distribution Sdn. Bhd.** (596854-A)

Lot 11B, Jalan 223, Section 51A,

46100 Petaling Jaya,

Selangor Darul Ehsan, Malaysia.

Tel: +603-7954 5200 Fax: +603-7954 5705

[www.kollektion.com.my](http://www.kollektion.com.my)

Careline  
1-800-881-770