

LEBENSSTIL
KOLLEKTION

DISTRIBUTED BY:
Kollektion Distribution Sdn. Bhd. (596854A)
Lot 11B, Jalan 223, Section 51A,
46100 Petaling Jaya,
Selangor Darul Ehsan, Malaysia.
Tel : +603-7954 5200 Fax : +603-7954 5705

www.kollektion.com.my

Careline
1-800-881-770

LEBENSSTIL
KOLLEKTION

Instruction Manual



LKGH-8302SDP
2 Burner Glass Hob



LKGH-8303SDP
Burner Glass Hob

 
Before operating this unit, please read these instructions completely.

CONTENTS


Title	Page
Part Identification	1
Safety Precautions	2 - 3
Installations	4
How To Use	5
Maintenance	6
Troubleshooting Guide	7

PARTS IDENTIFICATION

■ MODEL : LKGH-8302SDP




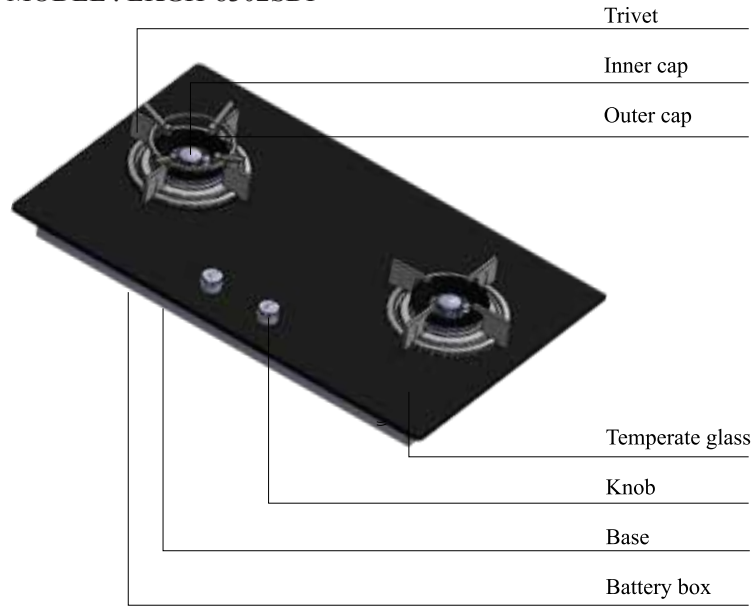


■ MODEL : LKGH-8303SDP

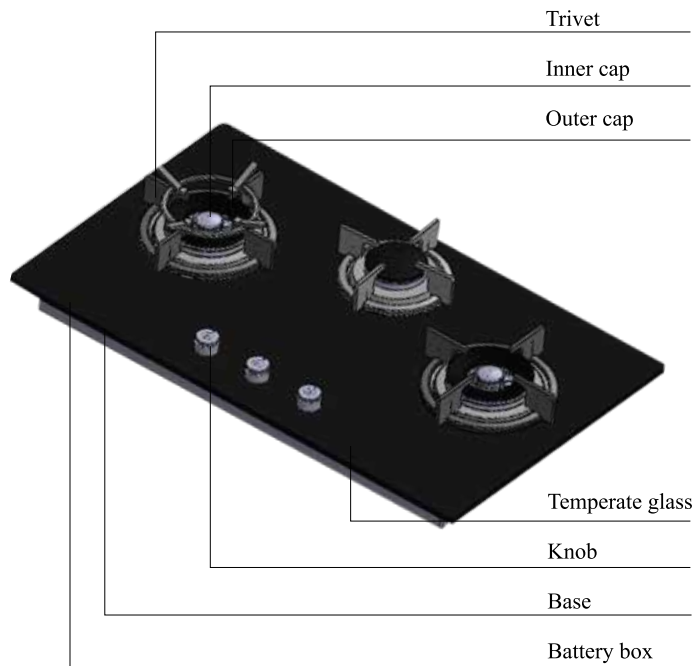 

SAFETY PRECAUTIONS

    - 2.1. Use only approved gas (LPG only) (Fig.1)
- 2.2. The appliance is strictly used for cooking only.
- 2.3. Avoid putting any inflammable material on the burner (Fig.2)
- 2.4. Use it in a well ventilated room but not facing strong wind. (Fig.3)
- 2.5. Used only approved gas hose & related accessories. (Fig.4)
- 2.6. Do not leave the appliance unattended when in use.
- 2.7. Be sure to turn off the appliance and the stopcock of the gas cylinder after use.
- 2.8. If abnormal combustion is observed while in use, turn off the appliance and the stopcock of the gas cylinder at once; examine the appliance referring to the "Trouble-Shooting Guide".
- 2.9. Avoid touching the burner, trivet, and top plate while in use or after use. (Fig.5)
- 2.10. Turn off the stopcock of the gas cylinder, open all the window and call the service department to repair if gas leakage happens. Do not switch on any electric appliance and ignite anything.
- 2.11. If you suspect the appliance is faulty, do not use it and call the service department.

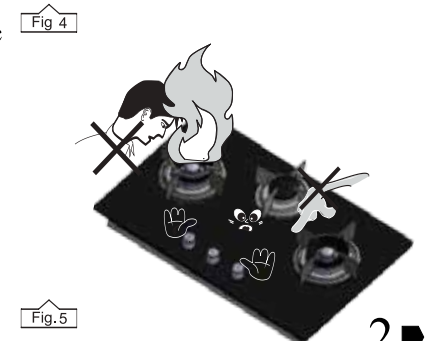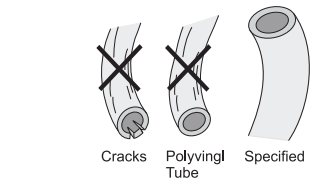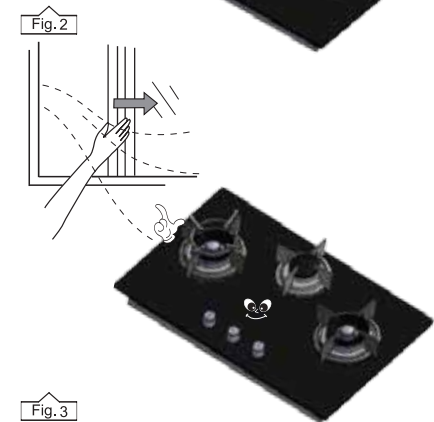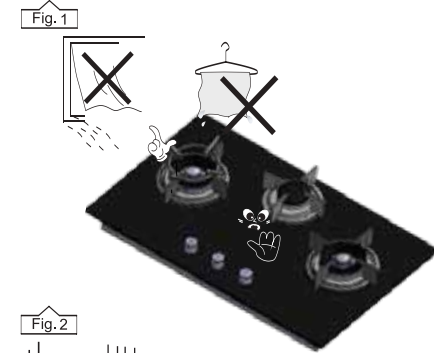

SAFETY PRECAUTIONS

2.12. Standards precaution logo :-

A) Do not place anything in between pan and pan support that may seriously damage the hob.(Fig.1)

Fig.1



B) Do not remove the pan support and enclose the burner. This will concentrate the flame and deflect the heat onto the hotplate.(Fig.2)

Fig.2



C) Do not use large or heavy weight pots which can bend the pan support and deflect the flame onto the hotplate.(Fig.3)

Fig.3



D) Locate pan centrally over burner so that it is stable and does not overhang the appliance.(Fig.4)

Fig.4



E) Use only wok support supplied or recommended by the hob manufacturer.(Fig.5)

Fig.5



INSTALLATIONS

3.1. This appliance is strictly for LPG only and use approved low pressure regulator and gas hose respectively.(Fig.1)

3.2. Place the unit away from wall and ceiling at distance.(Fig.2)

3.3. The cabinet hole cut-out dimension must be according to the size of cardboard provided.(Fig.3)

3.4. Remove all packing material and place the burner accordingly into the aperture.

3.5. Built in hob can also be used as normal table top by fixing the 4 rubber leg provided.

3.6. Insert gas hose onto the gas inlet and fasten with hose clip.

3.7. Insert the dry battery underneath the cooker into the battery component as show. (Fig.4)

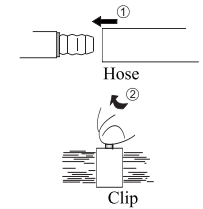 


Fig.1

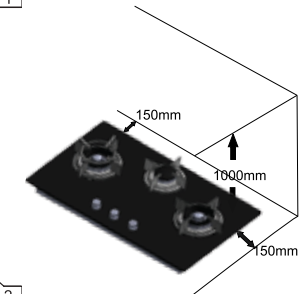 


Fig.2

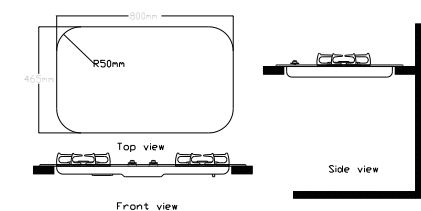 
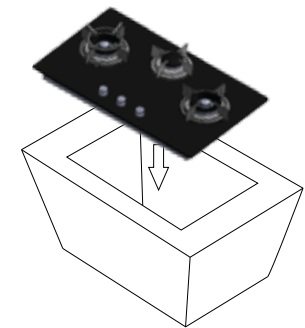 


Fig.3


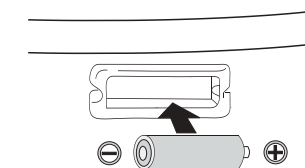 


Fig.4

HOW TO USE

For Model LKGH-8302SDP / LKGH-8303SDP

 - 4.1. Ensure ignition is at the 'OFF' position.
- 4.2. To ignite the Dual Ring flame turn on the gas cylinder, push the ignition knob downwards and turn the knob anti-clockwise.
- 4.3. For hobs with safety valve feature, hold for 3-5 seconds when pushing the ignition knob downwards before turning the knob anti-clockwise.
- 4.4. Flame can be adjusted accordingly by the ignition knob.
- 4.5. To ignite the Inner Ring flame turn on the gas cylinder, push the ignition knob downwards and turn the knob anti-clockwise.
- 4.6. Flame can be adjusted accordingly by the ignition knob.
- 4.7. Rotate knob clockwise until off position when finish.

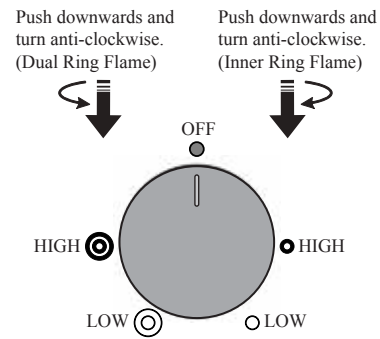


MAINTENANCE

- 6.1. Cleaning the top plate. Use soft cloth and mild detergent to wipe. Do not use PVC or metal brush to clean.
- 6.2. Do not use alkaline detergent, petrol, corrosive or bleaching material.
- 6.3. Do not put metal sheet, wire gauze or aluminium plate on top of burner for cooking purpose as this will cause irremovable stain and spoil top plate.
- 6.4. Use soft cloth or foam to clean the burner cap. Use soft brush for tough stain.
- 6.5. Do not hit or wash wash the burner cap with strong force.

For Model LKGH-8303SDP / LKGH-8302SDP

 - 5.1. Ensure ignition is at the 'OFF' position.
- 5.2. To ignite turn on the gas cylinder, push the ignition knob downwards and turn the knob anti-clockwise.
- 5.3. For hobs with safety valve feature, hold for 3-5 seconds when pushing the ignition knob downwards before turning the knob anti-clockwise.
- 5.4. Flame can be adjusted accordingly by the ignition knob.
- 5.5. Rotate knob clockwise until off position when finish.

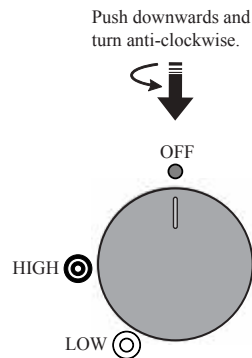

TROUBLESHOOTING GUIDE

Problem	Cause	Fix
Ignition Failed	Main gas stopcock is not turned on.	Turn off the appliance at once and then turn it on fully.
	Air remains in the gas piping.	Repeat igniting operation until all air in the pipe is purged out completely.
	Bent or crushed rubber tubing.	Straighten or replace the rubber tubing.
	Electrode is wet or dirty.	Dry or clean the electrode.
	Low battery.	Change battery.
Gas Leakage	Cracks or holes in the rubber tubing.	Replace it with a new one.
	Rubber tubing is not connected properly.	Connect the rubber tubing properly.
Abnormal Combustion	Burner cap is not fitted onto the burner properly.	Fix burner cap on burner properly.
	Burner port or nozzle is clogged.	Clean the clogged part.
	Gas cylinder empty.	Replace with new gas cylinder.