 


LebensSTIL
KOLLEKTION

MULTI- FUNCTION HAND MIXER

LKHM-1001X

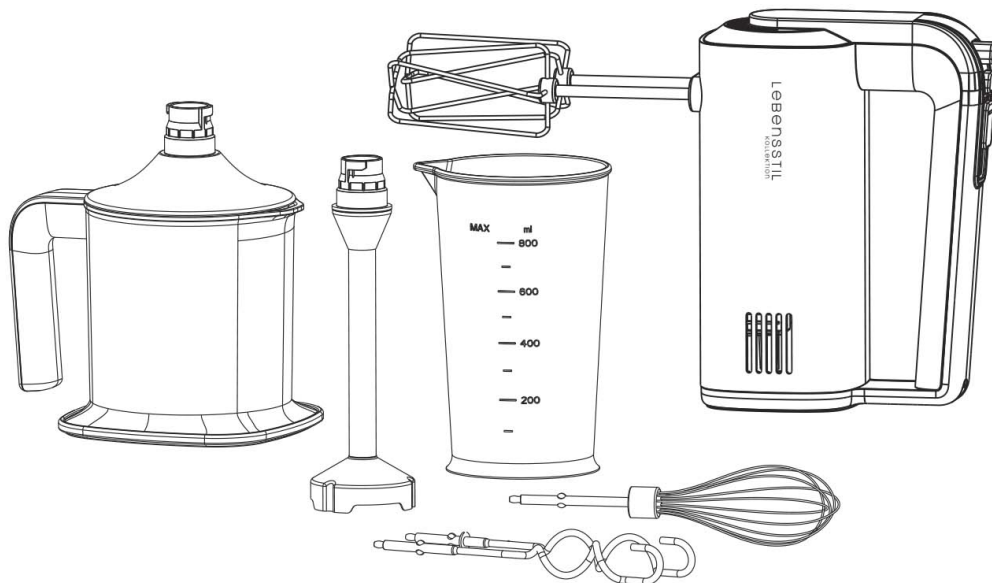

INSTRUCTION MANUAL

Before operating this appliance, please read these instructions completely.

CONTENT


Important Safeguards - - - - -	1
Product Overview - - - - -	2
Before First Use - - - - -	3
Using Your Multi-Function Hand Mixer - - - - -	3 – 5
Cleaning and Maintenance - - - - -	6
Waste Disposal - - - - -	6

❖ IMPORTANT SAFEGUARDS

Before using this electrical appliance, the following basic precautions should always be followed:

- 1) Please read this manual carefully to prevent injury and property damage.
- 2) Before using, ensure the appliance's voltage corresponds to this appliance's rating label.
- 3) Do not touch hot surfaces. Always use heat-resistant pads or materials until the appliance cools down.
- 4) Please do not modify, disassemble or repair this appliance without authorisation to prevent fire, electric shock or injury. If there is a malfunction, please send it to Lebensstil Kollektion Customer Care Centre for repair.
- 5) Do not share the same power socket of this appliance with other high-powered home appliances as this may cause short circuit or fire.
- 6) If an abnormality or malfunction occurs, please stop using it immediately and remove the power plug to prevent fire, electric shock and injury.
- 7) Do not let children play or touch the appliance and plug to prevent injury and electric shock.
- 8) Please remove power plug from socket before cleaning to prevent fire and electric shock, and ensure the appliance has cooled down to prevent burns.
- 9) After using the appliance, please remove power plug from socket to prevent electric shock, fire and other injuries. When removing the power plug, do not pull on the power cord. Always hold the power plug and remove it from the socket to prevent electric shock or short circuit.
- 10) Do not touch the plug with wet hands, otherwise this may cause electric shock.
- 11) Do not immerse the appliance in water or pour water on the appliance to prevent electric shock, short circuit or malfunction.
- 12) Do not use in unsuitable environments such as near flammables, explosives, high humidity, and extreme heat or directly under the sun.
- 13) Do not use the power cord if it is damaged or repair the power cord by yourself. Abnormal twisting, bending, stretching, or placing it in a highlyheated environment may damage the appliance and its power cord.
- 14) Do not leave the appliance unattended while it is operating. When the appliance is in operation, please do not leave it unattended. Keep children and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge out of the reach of appliance.
- 15) Do not touch hot surface.
- 16) Do not clean with a metal cleaning brush, abrasive materials or strong detergents.
- 17) Do not use outdoors. Do not use the appliance for other than its intended use.
- 18) This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they are given supervision or instruction concerning use of this appliance in a safe way and they understand the hazards involved.
- 19) This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- 20) This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.

 ❖ PRODUCT OVERVIEW

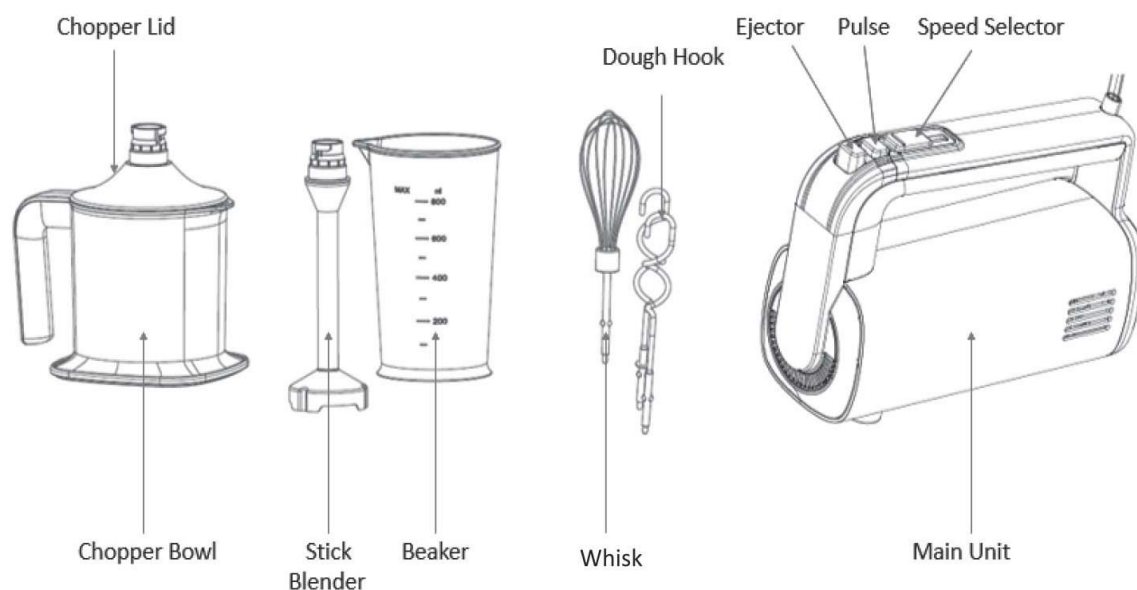

MODEL NO	LKHM-1001X
Power Output	220 – 240V; 50HZ – 60HZ; 500W
Chopper Bowl Capacity (ml)	750ml
Beaker Capacity (ml)	800ml
Main Unit Size	L195*W80*H145mm
Gif Box (L * W * H) mm	364*222*207mm
Gift Box Weight (g)	2.58kgs

Speed Usage Recommendation

Speed	Action	Description
1	Combine / Blend	Suitable for blending large quantity and dry food ingredients, such as flour, sugar.
2	Slow Whisk	Perfect speed for adding liquids or mixing salad dressing.
3	Combine / Whisk	Suitable for Pastry or Cake Mixture.
4	Mix / Fast Whisk	Suitable for whipping cream, mixing butter + sugar, custard, etc.
5	Whip	Whisking egg, meringue, potato puree, whipping cream, mayonnaise, etc...

❖ BEFORE THE FIRST USE

- 1) Remove all packaging materials, stickers and labels from the appliance (excluding the rating label).
- 2) Clean all parts to remove any dust or manufacturing residue.
- 3) Wash all removable parts manually with clean water, mild dish washing liquid and a non-abrasive sponge. Do not submerge the Main Body in water. Wipe with a damp cloth.
- 4) Wipe the inside and outside of the appliance with a moist cloth.

WARNING: Do not plug the power cord into an electrical outlet until the accessories such as beaters, dough hooks, whisk, stick blender, chopper have been securely attached. Please ensure the Speed Selector is set to the "0"(Off) position.

❖ USING YOUR MULTI-FUNCTION HAND MIXER

Please unplug the power cord and ensure the speed selector is at "0" (Off) position.

a) Beater and Dough Hook

- 1) Your Hand Mixer is supplied with 2 Beaters and 2 Dough Hooks.
- 2) One of the Beater / Dough Hook has this 'Plate' (Ref Fig 1). This has to be fitted in a larger size socket of the Hand Mixer (Ref Fig 2). Please fit another Beater / Dough Hook to the other side of the hand mixer's socket.

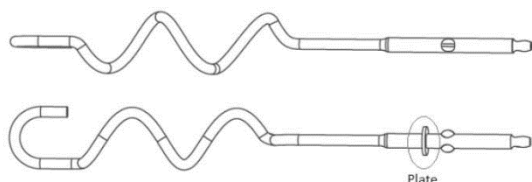


Fig 1

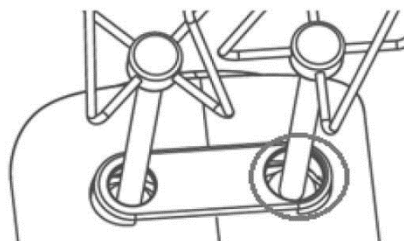


Fig 2

- 3) Plug the Hand Mixer into the wall power socket, ensuring the speed selector is at "0".
- 4) There are 5 speed settings. Turn speed selector to the desired speed and the Hand Mixer will start working.
TIP: Begin mixing at a lower speed setting "1" to prevent splattering, then slowly increase to your desired speed.
Note: Press PULSE for high speed (applicable only for speeds "1" to "4"). PULSE speed is equivalent to Speed "5".
WARNING:
 - Please ensure there are no other utensils in the bowl before mixing.
 - Avoid allowing beaters or dough hooks to hit against the side of the mixing bowl while the mixer is in use as this will result in damage to the beaters/dough hooks.
 - The Max operating time should not exceed 10 minutes. Allow the appliance to cool down to room temperature before using it again.
- 5) Please turn the speed selector to "0" after mixing is completed.
- 6) Unplug the power cord from wall power socket.
- 7) Press the Ejector button to remove the Beater/Dough Hook.

b) Whisk

- 1) Your Hand Mixer is supplied with 1 Whisk. The Whisk is to be fitted at the large size socket of the Hand Mixer.
- 2) Plug the Hand Mixer into the wall power socket, ensuring the speed selector is at "0".
- 3) There are 5 speed settings, turn the speed selector to the desired speed and the Hand Mixer will start working.

TIPS: Always begin mixing on a lower speed setting "1" to prevent splattering. And slowly increase the speed to your desired speed.


Note: Press PULSE for high speed (applicable only for speeds "1" to "4"). PULSE speed is equivalent to Speed "5".

WARNING:

- Please ensure there are no other utensils in the bowl before mixing.
 - Avoid allowing beaters or dough hooks to hit against the side of the mixing bowl while the mixer is in use as this will result in damage to the beaters/dough hooks.
 - The Max operating time should not exceed 10 minutes. Allow the appliance to cool down to room temperature before using it again.
- 1) Please turn the speed selector to "0" after mixing is completed.
 - 2) Unplug the power cord from wall power socket.
 - 3) Press the Ejector button to remove the Beater/Dough Hook.


c) Stick Blender

- 1) Attach the Blending rod to the Main Unit
- 2) Turn the Blending rod anti-clockwise to lock it.

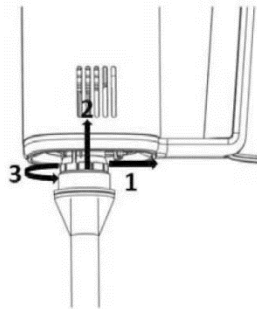

Note: You will hear a "click" when it is locked firmly in place.

- 3) Plug the Hand Mixer into the wall power socket, ensuring the speed selector is at "0".
- 4) Place the Blending rod into the Beaker with food to be blended.

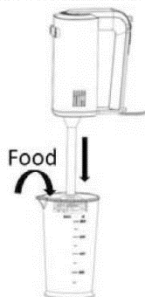

- 5) There are 5 speed settings, turn speed selector to "M".
- 6) Press the PULSE button and the Hand Mixer will start working.

Note: Please hold the Hand Mixer Handle while it is working


WARNING: Please ensure there are no other utensils in the bowl before mixing. The Max operating time should not exceed 1 minute per cycle. Allow the appliance to cool down to room temperature before using it again.

- 7) Please turn the speed selector to "0" after mixing is completed.
- 8) Unplug the power cord from wall power socket.
- 9) To remove the stick blender, please turn the main unit clockwise and pull it.

d) Chopper

Warning: The chopper blades are sharp.


- 1) Carefully insert the Chopping Blade into Chopping Bowl before putting in the food ingredients.
- 2) Attach the Main Unit onto the Lid.

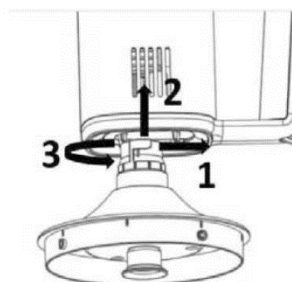

- 3) Place the food into the chopping bowl.

Note: Please do not exceed the Max Line.

- 4) Fix Main Unit + Lid to the chopping bowl and turn the Lid clockwise to lock it.

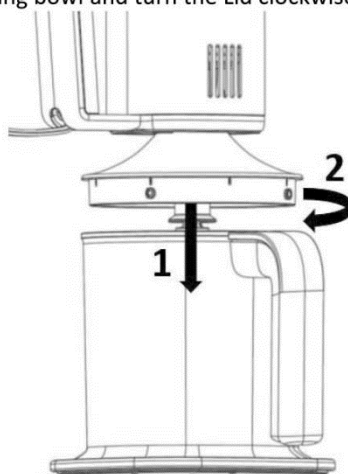

- 5) The main unit will not lock onto the Chopping Bowl Blending Lid for safety reasons.

- 6) There is total 5 speed setting, turn the speed selector to "M"

- 7) Press the PULSE button and the Hand Mixer will start working.

Note: Press PULSE for high speed (applicable only for speeds "1" to "4"). PULSE speed is equivalent to Speed "5".

WARNING:

- Please ensure there are no other utensils in the bowl before mixing.
- Avoid allowing beaters or dough hooks to hit against the side of the mixing bowl while the mixer is in use as this will result in damage to the beaters/dough hooks.
- The Max operating time should not exceed 10 minutes. Allow the appliance to cool down to room temperature before using it again.
Please turn the speed selector to "0" after mixing is completed.
Unplug the power cord from wall power socket.
Press the Ejector button to remove the Beater/Dough Hook.

❖ CLEANING AND MAINTENANCE

NOTES

- 1) Turn the speed selector to “OFF” position and unplug the appliance after finish operating.
- 2) Do not immerse the whole Stick Blender in water. Wash only the head of the blade.

Maintenance

- 1) Wipe the appliance with a soft, damp cloth and mild detergent.
- 2) Oil stains should be wiped and cleaned with a mild detergent.
- 3) Clean all food remnants including the capsand gaps with a toothpick.
- 4) Never rinse or immerse the main body in water, as this may result in electric shock or malfunction.

❖ WASTE DISPOSAL

PROTECT THE ENVIRONMENT. DISPOSE RESPONSIBLY



You can help protect the environment!
Please remember to respect the local regulations; hand in non-working electrical equipment to an appropriate waste disposal centre.

Lebensstil KOLLEKTION

Distributed By:

PENSONIC SALES & SERVICE SDN. BHD. (162419-M)
1165, Lorong Perindustrian Bukit Minyak 16,
Taman Perindustrian Bukit Minyak,
14100 Simpang Ampat, Penang, Malaysia.

www.lebensstilkollektion.com

1-800-881-770