

LEBENSSTIL
KOLLEKTION

Distributed By:
PENSONIC SALES & SERVICE SDN. BHD. (162419-M)
1165, Lorong Perindustrian Bukit Minyak 16,
Taman Perindustrian Bukit Minyak,
14100 Simpang Ampat, Penang, Malaysia.


www.lebensstilkollektion.com

1-800-881-770

LEBENSSTIL
KOLLEKTION

MULTI- FUNCTION COOKER

LKMC-1001X

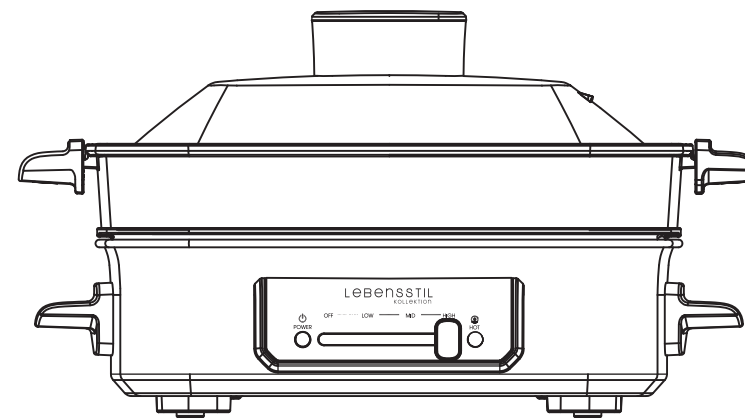

INSTRUCTION MANUAL

Before operating this appliance, please read these instructions completely.

CONTENT


Important Safeguards - - - - -	1
Product Overview - - - - -	2
Before First Use - - - - -	3
Using Your Multi-Cooker - - - - -	4
Cleaning and Maintenance - - - - -	5
Waste Disposal - - - - -	5

❖ IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed including the following:


- 1) To prevent injury and property damage, please read this manual carefully.
- 2) Before using check that the voltage power corresponds to the one shown on the appliance nameplate.
- 3) Do not touch hot surfaces; always use heat-resistant pads or materials until the appliance cools down.
- 4) Please do not modify, disassemble or repair this appliance without authorization to prevent fire, electric shock or injury. If there is a malfunction, please send it to Lebensstil Kollektion Customer Care Centre for repair.
- 5) Do not use the same socket for this appliance and other high-powered home appliances as this may cause short circuit or fire.
- 6) If an abnormality or malfunction occurs, please stop using it immediately and remove the power plug to prevent fire, electric shock and injury.
- 7) Do not allow children to touch the appliance and plug to prevent injury and electric shock.
- 8) Please remove power plug from socket before cleaning to prevent fire and electric shock, and ensure the appliance has cooled down to prevent burns.
- 9) After using the appliance, please remove power plug from socket to prevent electric shock, fire and other injuries. When removing the power plug, do not pull on the power cord. Always hold the power plug and remove it from the socket to prevent electric shock or short circuit.
- 10) Do not touch the plug with wet hands, otherwise it may cause electric shock.
- 11) Do not immerse the appliance in water or pour water on the appliance to prevent electric shock, short circuit or malfunction.
- 12) Do not use in unsuitable environments such as near flammables, explosives, high humidity, high temperature and directly under the sun.
- 13) Do not use the power cord if it is damaged. Do not repair the power cord by yourself. Abnormal twisting, placing it in a high temperature environment, or stretching with external force may damage the power cord.
- 14) When the appliance is in operation, please do not leave it unattended. Keep children and the persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge out of the reach of appliance.
- 15) Do not touch the hot surface. Use handles or knobs.
- 16) Do not clean with a metal cleaning brush.
- 17) Do not move the appliance when it is loaded with hot oil or other hot liquid.
- 18) Do not use outdoors. Do not use the appliance for other than intended use.
- 19) Do not use plastic trays or plastic wraps on the baking pan.
- 20) Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and they understand the hazards involved.
- 21) Pay attention to hot steam. The appliance will produce heat and hot steam when working, so please take appropriate measures to prevent injury and burns.
- 22) Appliances are not intended to be operated by means of an external timer or separate remote-control system.
- 23) This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.

❖ PRODUCT OVERIEW

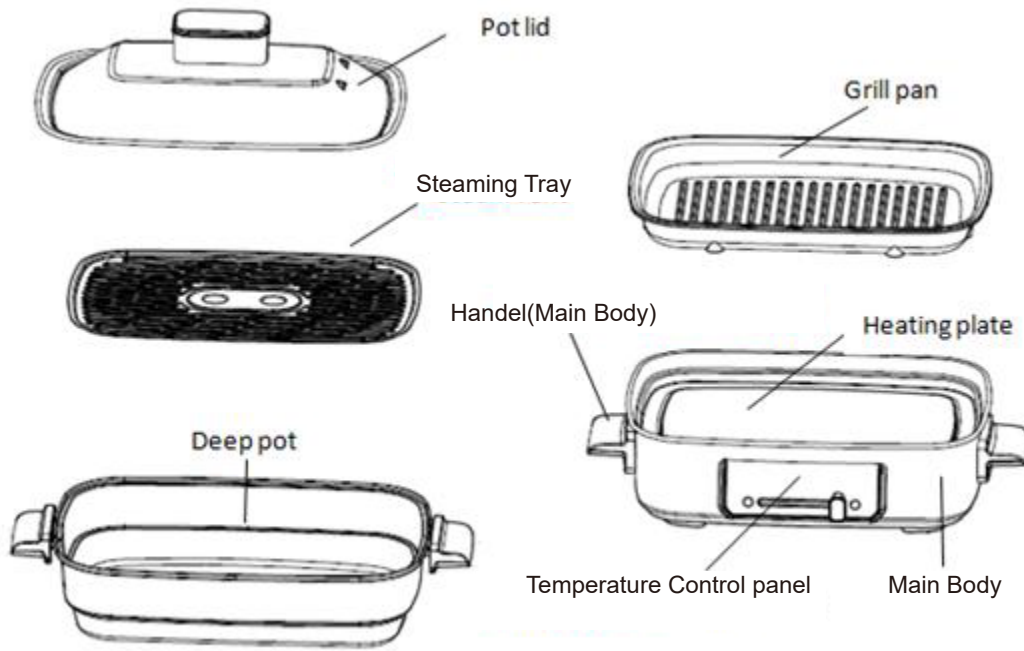

MODEL NO	LKMC-1001X
Power Output	1,200W
Product Size	415(L)x253(W)x234(H) mm
Product Weight	4.50 kg
Carton Size	446(L) X 298(W)X 252(H) mm
Carton Weight	5.40 kg

Temperature Control Panel

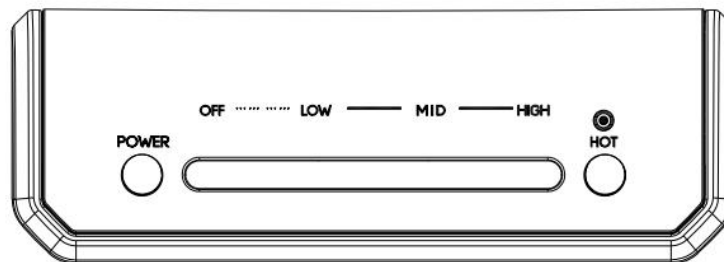

LOW 65-110°C

MED 135-175°C

HIGH 205-245°C

❖ BEFORE FIRST USE

- 1) Remove all packaging materials.
- 2) Remove all stickers and labels from the appliance (excluding the rating label).
- 3) Clean all parts to remove any dust or manufacturing residues.
- 4) Thoroughly wash all removable parts by hand with clean water, washing-up liquid and a non-abrasive sponge. Do not submerge the Main Body in water. Wipe with a damp cloth.
- 5) Wipe the inside and outside of the appliance with a moist cloth.
- 6) Before placing the Deep Pot / Grill Pan onto the base, please ensure there is no water in between the Deep Pot / Grill Pan and the heating plate.
- 7) After placing the Deep Pot / Grill Pan onto the base, please ensure it is fitted properly.
- 8) Do not use metal spatula, knives or other hard objects in the cooking pot and baking pans to prevent damage to pot coating.
- 9) The appliance may emit slight smoke during first use.
- 10) The heating element of appliance is sprayed with a layer of oil to protect it from being damaged during transportation. Therefore, there will be a slight taste and smoke produced when the appliance is used for the first time.

This is normal and will disappear after the appliance is being used for some time. The indicator light and heating cycle is designed to turn on and turn off, which is also a normal occurrence and is not a device failure. If you hear a clicking sound, it is due to the thermal change of the heater and it is not a device failure, so please don't worry.

❖ USING YOUR MULTI-COOKER

WARNING: Never touch the heating plate and the surface of baking pan as they are very hot after finish cooking.

Deep Pot / Grill Pan

- 1) Insert the power cord into the main body, place the Deep Pot / Grill Pan, then connect the appliance with power source, the power indicator lights up and the appliance is ready for preheating.
- 2) Adjust the Temperature Control Switch to the desired temperature, then the heating indicator lights up and the appliance starts to heat. When desired temperature has been reached, heating indicator light will turn off. It is ready for cooking.

Warning: Please be careful to prevent scalding when operating as the main body and Deep Pot / Grill Pan will become very hot during preheating.

NOTE: The power cord shall be inserted tightly into the main body and must not be in contact with the heating plate. DO NOT need to use the pot's lid when preheating.

- 3) Apply a proper amount of cooking oil on the Deep Pot / Grill Pan.
- 4) Add in the ingredients to Deep Pot / Grill Pan.
NOTE: Please ensure the ingredients do not exceed the Max Line when cooking with Deep Pot
NOTE: Do not need to use the Pot Lid when cooking in the Grill Pan
NOTE: Do not use metal spatula, knives or other hard objects in the cooking pot and baking pans to prevent damage to pot coating
- 5) After cooking, please turn the temperature control switch to “OFF” position.
- 6) Unplug the appliance.
- 7) Clean the appliance with a soft, damp cloth and mild detergent after the baking pans cool down completely.
WARNING: After Cooking, the heating plate and Deep Pot / Grill Pan will be hot. Wash when it is cooled down.

Steaming Tray

- 1) Place the Deep Pot onto the Heating Plate.
- 2) Fill the Deep Pot with water.
NOTE: Please ensure do not exceed the Max Line mark shown in Deep Pot
- 3) Place the steaming tray into the Deep Pot.
- 4) Place the ingredients on Steaming Tray, and set to the desired temperature.
- 5) Place the Pot Lid onto the Deep Pot while steaming.
- 6) After cooking, please turn the temperature control switch to “OFF” position.
- 7) Unplug the appliance.
- 8) Clean the appliance with a soft, damp cloth and mild detergent after the baking pans cool down completely.
WARNING: After Cooking, the heating plate and Deep Pot will be hot. Wash when it is cooled down.

❖ CLEANING AND MAINTENANCE

NOTES

Clean all food remnants and stains on and inside the baking pan thoroughly. Do not leave any food inside.

- 1) Turn the temperature control switch to “OFF” position and unplug the appliance after finish operating.
- 2) The baking pan and cooking pot can be only cleaned with a soft cloth and mild detergent after cooling down completely.
- 3) Use a wooden spoon or bamboo stick to stir the food during cooking. Do not use metal knife or spoon.
- 4) Before cleaning and maintenance, please ensure sure that the power source of the product has been disconnected, and the main body and accessories are cooled down completely.

Maintenance

- 1) Wipe the appliance with a soft, damp cloth and mild detergent.
- 2) Oil stains should be wiped and cleaned with a diluted mild detergent.
- 3) Clean all food remnants including the caps, including gaps, with a toothpick.
- 4) Never rinse or immerse the main body in water, as this may result in electric shock or malfunction.

Maintenance for Pot lid, Deep Pot, Grill Pan and steaming Tray

The Pot lid, Deep Pot, Grill Pan and steaming Tray can be rinsed with water and then dried with a soft cloth after being cleaned with a neutral detergent.

❖ WASTE DISPOSAL

PROTECT THE ENVIRONMENT. DISPOSE SAFELY



You can help protect the environment!

Please remember to respect the local regulations; hand in non-working electrical equipment to an appropriate waste disposal centre.