

Lebensstil  
KOLLEKTION

Distributed By:  
PENSONIC SALES & SERVICE SDN. BHD. (162419-M)  
1165, Lorong Perindustrian Bukit Minyak 16,  
Taman Perindustrian Bukit Minyak,  
14100 Simpang Ampat, Penang, Malaysia.

 
[www.lebensstilkollektion.com](http://www.lebensstilkollektion.com)

1-800-881-770

Lebensstil  
KOLLEKTION

# AIR FRYER OVEN 18L

LKAF-2001X

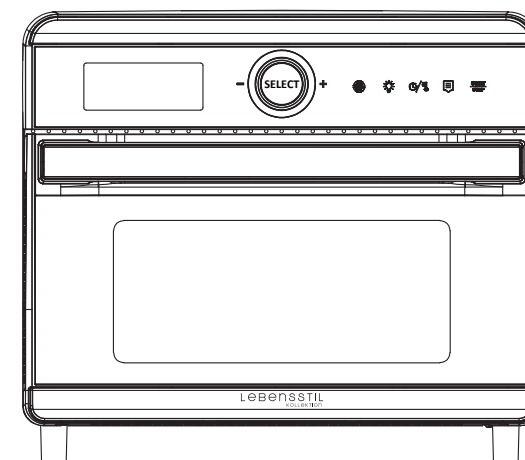

## INSTRUCTION MANUAL

Before operating this appliance, please read these instructions completely.

# CONTENT

Important Safeguards - - - - -	1 - 2
Product Overview - - - - -	3
Control Panel - - - - -	4
Before First Use - - - - -	5
Using Your Air Fryer Oven - - - - -	6
Pre-set Menu Guide - - - - -	7
Cleaning and Maintenance - - - - -	8
Environmentally Friendly Disposal - - - - -	8

 
 
## ❖ IMPORTANT SAFEGUARDS

Before using the electrical appliance, please read the following instructions and save them for future reference:


- 1) Before using ensure the voltage stated on the appliance corresponds with the mains voltage.
- 2) Do not touch the hot surfaces. The temperature of the appliance's surface may be high when the air fryer is operating. Always use oven mitts when handling hot materials, and allow metal parts to cool down before cleaning. Allow the units to cool thoroughly before putting in or taking off parts. Always use the handle when moving the unit.
- 3) Please do not modify, disassemble or repair this appliance without authorization to prevent fire, electric shock or injury. If there is a malfunction, please send it to Lebensstil Kollektion Customer Care Centre.
- 4) If an abnormality or malfunction occurs, please stop using it immediately and remove the power plug to prevent fire, electric shock and injury.
- 5) Do not allow children to touch the appliance and plug to prevent injury and electric shock.
- 6) Please remove power plug from socket before cleaning to prevent fire and electric shock, and ensure the appliance has cooled down to prevent burns.
- 7) After using the appliance, please remove power plug from socket to prevent electric shock, fire and other injuries. When removing the power plug, do not pull on the power cord. Always hold by the power plug when removing it from the socket to prevent electric shock or short circuit.
- 8) Do not touch the plug with wet hands, otherwise it may cause electric shock.
- 9) Do not immerse the appliance in water or pour water on the appliance to prevent electric shock, short circuit or malfunction.
- 10) Do not use in unsuitable environments such as near flammables, explosives, high humidity, high temperature and directly under the sun.
- 11) Do not use the power cord if it is damaged. Do not repair the power cord by yourself. Abnormal twisting, placing it in a high temperature environment, or stretching with external force may damage the power cord.
- 12) When the appliance is in operation, please do not leave it unattended. Keep children and the persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge out of the reach of appliance.
- 13) Do not clean with a metal cleaning brush. Pieces will break off the pad and fall into electrical parts involving a risk of electrical shock.
- 14) The use of accessories not recommended by manufacturer may cause injury to persons or damage to appliance.
- 15) Do not store anything or place anything in or on the appliance that is not recommended by the manufacturer.
- 16) Do not use outdoors or for commercial purpose, and do not use this appliance for other than its intended purpose.
- 17) Do not let cord hang over the edges of tables or counters.
- 18) Do not place the appliance near hot gas, burners or other appliances that produces heat.
- 19) Fire may occur if the appliance is covered or touches flammable materials, including curtains, draperies, walls and the like when in operation. Do not store any items on top of the appliance during operation.

- 20) Do not place any flammable materials such as paper, cardboard, plastic or other things that may catch fire in the appliance.
- 21) Do not cover tray or any part of the oven with metal foil as this will cause overheating.
- 22) Oversized food shall not be put into the appliance as it may cause fire or damage the appliance.
- 23) Extreme caution is necessary when disposing the hot grease when broiling.
- 24) To turn this appliance off, turn all the controls to "OFF" position.
- 25) To avoid scalding, do not touch the tray/grid/basket before cooling it down completely.
- 26) The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- 27) Keep the appliance and its cord out of reach of children less than 8 years.
- 28) The appliance is not intended to be operated by means of an external timer or separate remote-control system.


## ❖ PRODUCT OVERVIEW

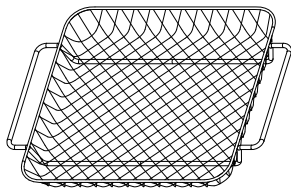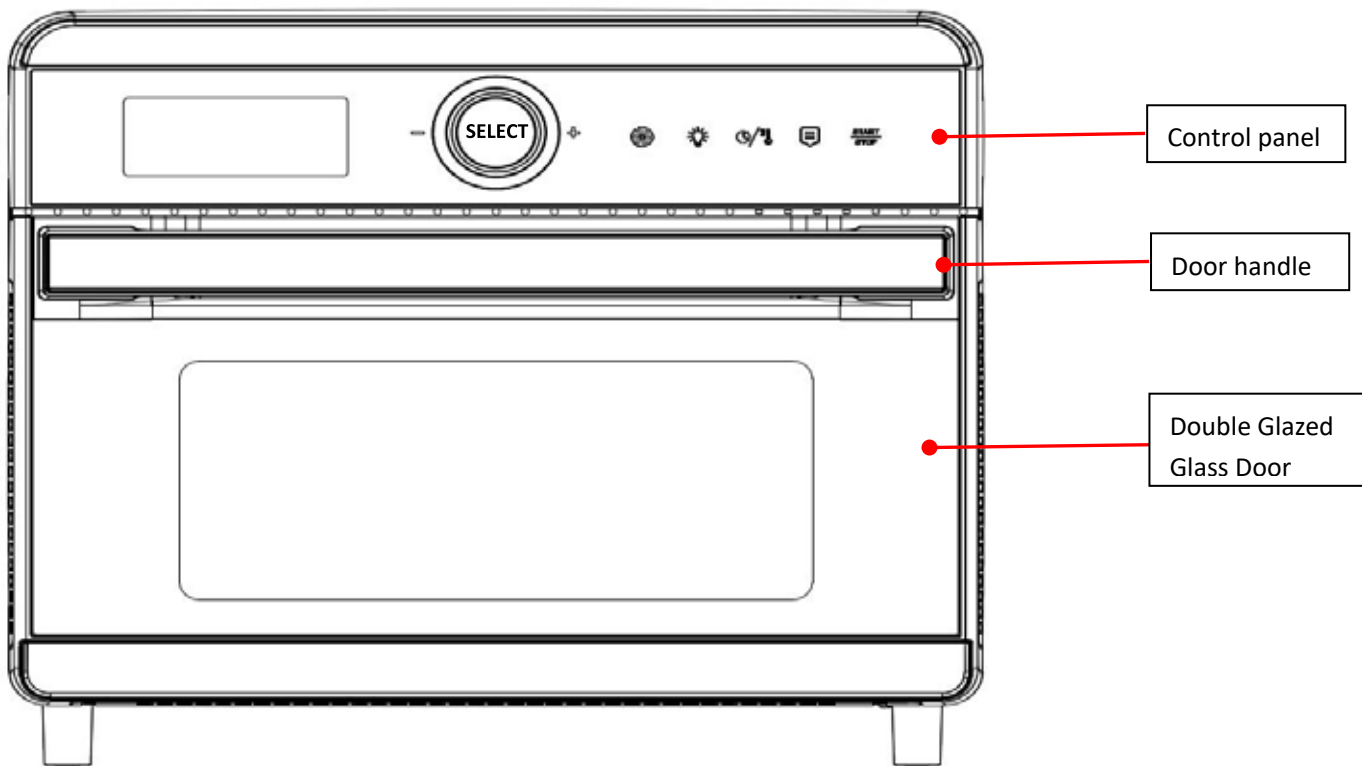


Wire Basket  
(322\*264\*30 mm)

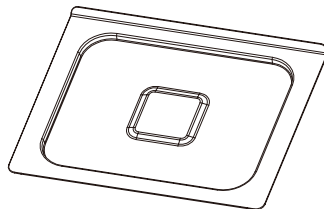


Dripping Pan  
(317\*256\*17 mm)

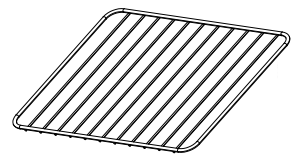


Wire Grid  
(321\*260\*Ø5 mm)

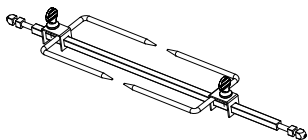

Rotisserie

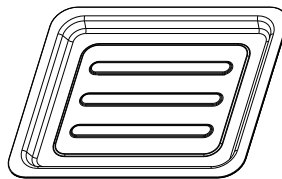


Baking Tray  
(320\*271\*16 mm)

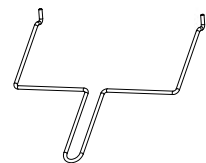

Rotisserie Removal holder

<b>Model No:</b>	<b>LKAF-2001X</b>
<b>Power Output:</b>	<b>1550 watt</b>
<b>Product Size:</b>	<b>400x403x348 mm</b>
<b>Inner Cavity Size :</b>	<b>322x288x190 mm</b>
<b>Product Weight:</b>	<b>9.2 kg</b>
<b>Carton Size:</b>	<b>475x468x462 mm</b>
<b>Carton Weight:</b>	<b>12 kg</b>

## ❖ CONTROL PANEL

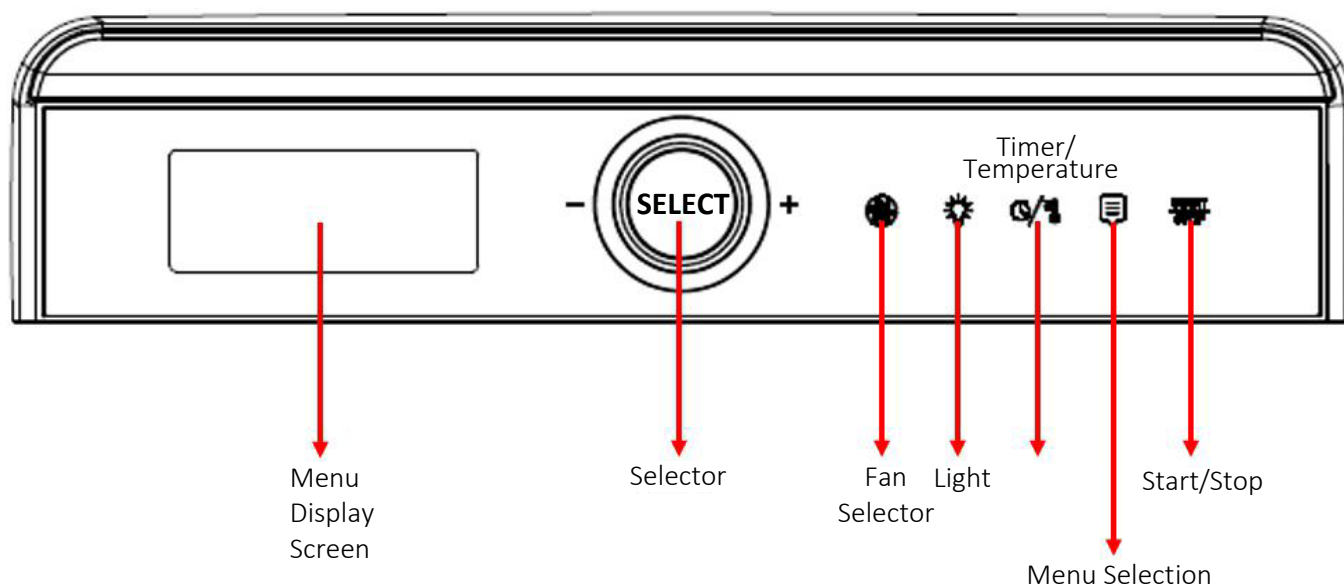

**Menu Selector:** To select the pre-set menu using this button.

**Fan button:** To On/Off fan of cooking mode.

**Note:** This fan button *is NOT* available for AIR FRY, Broil and Dehydrate cooking mode.

**Light:** After the unit is powered on, press the light button to turn on the lamp, and it will automatically light on and off after 30 seconds each time. The light will stay lighted for 30 seconds after pressing START button. When cooking cycle is completed, the light will turn on and stay for 30 seconds.

**Adjustor:** The adjustor knob is used to select menu, set timer, set temperature, set browning level of the toast and number of slices of bread / bagel. Twist clockwise to increase and anti-clockwise to decrease.

**Menu button:** To activate the menu selection mode. You may also press and hold for 3 seconds to set the temperature either °C or °F.

**Note:** You may activate the menu selection mode at standby mode or pause status.

**Start/stop button:** You may pause the cooking process by pressing the start/stop button as well as to re-adjust the timer/temperature in PAUSE status. Press and hold the start/stop button for 3 seconds to return to the menu selection mode.


## ❖ BEFORE FIRST USE

Before using the appliance for the first time, all accessories must be washed with clean water and rinsed.

- 1) Remove all packaging materials.
- 2) Remove all stickers and labels from the appliance (excluding the rating label).
- 3) Clean all parts to remove any dust or manufacturing residues.
- 4) Thoroughly wash all removable parts by hand with clean water, washing-up liquid and a non-abrasive sponge. Do not submerge the Main Body in water. Wipe with a damp cloth.
- 5) Wipe the inside and outside appliance with a moist cloth.
- 6) Dry all parts of your appliance thoroughly. When replacing the pan / tray, ensure it is aligned correctly.
- 7) Use the appliance on a horizontal, flat and stable heat resistant surface, away from a heating source and where it cannot be splashed by water.
- 8) The appliance may emit slight smoke during first use.
- 9) Please ensure there is adequate ventilation and gap of at least 20cm around the appliance.
- 10) Do not place unit under cabinets or too close to the wall to allow heat to flow without damaging counter space. Plug unit into electrical outlet.
- 11) Minimal smell and smoke may be emitted for about 15 min during first use. It is due to the protective substance on heating elements.
- 12) It is recommended to place food at least below 30mm from the upper heating element for optimal result.
- 13) The inner cavity is equipped with different height of slots for placing grill rack in order to get perfect result.
- 14) Please ensure dripping tray is in place before using.


## ❖ USING YOUR AIR FRYER OVEN

1. Plug the power cord into the power outlet.
2. Connect to power source. Display screen will light up. Use SELECTOR to select your desired menu.

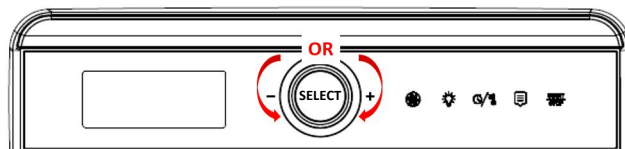


**Note:** Default Menu selection is AIRFRY function. There are 12 Pre-Set functions for this appliance.

3. Once your desired function is selected, you may adjust the temperature and cooking time by pressing Temp/Time button.

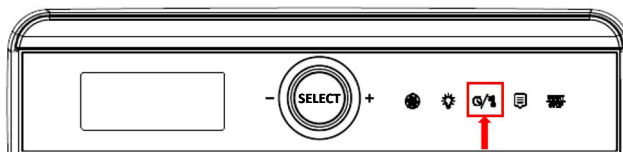

4. Set your desired cooking time and temperature using the selector.

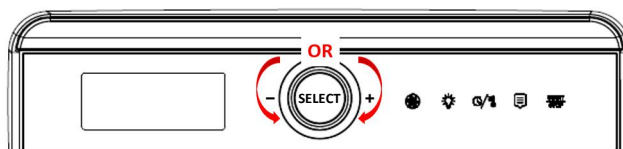

**Note:** When the Toast/Bagel menu is selected, press the time/temperature button to set the number of slices of bread or bagel and press the time/temperature button again to set the color of the toast.

5. Press start/stop button to start working.

**Note:** You may pause cooking by pressing start/stop button while the appliance is operating.

6. Remove the power plug from socket.
7. Clean the appliance.

### CAUTION!

- 1) To prevent countertop from being damaged, the toaster oven must be operated with the Dripping Pan in place, securely closed and cleaned of excess food.
- 2) Never operate your toaster oven with the oven door open.
- 3) Never put the baking pan (or any other accessory) directly on the top of the lower heating elements.



## ❖ PRE-SET MENU GUIDE

Menu	Default time	Time/color adjustable range	Default temperature or Number of bread/bagels	Adjustable temperature range /number of slices	Pre-heat	Default Fan	FAN	Top / Bottom Heat
AIRFRY	15 mins	01 min – 45 mins	205 °C (400°F)	50°C - 205 °C (120°F - 400°F)	Yes	On	No	Maxi Top
TOAST	4 colors	1-2-3-4-5-6	4 slices	1-2-3-4-5-6	No	Off	No	Top + Bottom
BAGEL	4 colors	1-2-3-4-5-6	4 bagels	1-2-3-4-5-6	No	Off	No	Top + Bottom
BAKE	30 mins	01min–4hrs	165 °C (325 °F)	50-230 °C (120-450 °F)	Yes	On	Yes	Top + Bottom
PIZZA	15 mins	01 min – 60 mins	190 °C (375°F)	50-230 °C (120-450 °F)	Yes	On	Yes	Top + Bottom
BROIL	10 mins	01 min – 20mins	205 °C (400 °F)	150 °C & 205 °C (300°F & 400°F)	Yes	On	No	Top + Bottom
ROAST	40 mins	01min–4hrs	175 °C (350 °F)	50-230 °C (120-450 °F)	Yes	Off	No	Top + Bottom
DEHYDRATE	6 hrs.	30mins–72hrs	49°C (120°F)	30-80 °C (85-175 °F)	No	On	No	Top
REHEAT	15 mins	01min–2hrs	160 °C (320°F)	50-230 °C (120-450 °F)	No	On	Yes	Top + Bottom
WARM	60 mins	01 min – 4 hrs	70 °C (160°F)	Not adjustable	No	Off	No	Bottom
FERMENT	2 hrs.	30mins–48hrs	35 °C (95°F)	Not adjustable	No	Off	No	Bottom
DEFROST	60 mins	01min–6hrs	45°C (113°F)	Not adjustable	No	Off	No	Bottom


### Note:

1. It is normal that condensation will appear on the oven door and it will goes off after a while.
2. It might need longer cooking time for frozen foods or thick meat.
3. Avoid opening the Oven Door frequently to prevent heat loss.
4. When baking, smoke may be emitted. Removing excess fat prior to baking can reduce this.

## ❖ CLEANING AND MAINTENANCE

- 1) Clean the appliance after each use, but remove the mains plug from the wall and allow the appliance to cool down.
- 2) Clean the door by using a hot cloth with detergent or soap.
- 3) Remove the power cord when cleaning the appliance.
- 4) Wipe the external surface of the appliance with a warm cloth.
- 5) If any food residue is stuck to any accessories, soak it with hot water for approximately 20 minutes. Do not place inside the main unit.
- 6) DO NOT use the dishwasher to clean any of the accessories that come with this appliance.
- 7) Do not use metal kitchen utensils or abrasive cleaning materials to clean them, as this may damage the coating.
- 8) Do not wipe the heating elements.
- 9) Do not place the wire rack and baking pan directly on the lower heating element.
- 10) Clean the inside of the appliance with a damp cloth.
- 11) Dry all parts of your Air Fryer thoroughly and replace the Basket (8). When replacing the Drawer, ensure it is aligned correctly.

## ENVIRONMENT FRIENDLY DISPOSAL

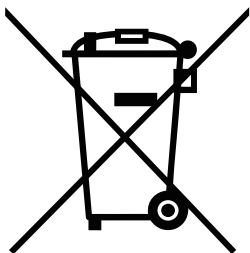

You can help protect the environment!  
Please remember to respect the local regulations: hand in the non-working electrical appliance to an appropriate waste disposal center.

